

Air Lift Adjustment Instruction

(3 steps soft-touch air lift system means a gentle push moves your machine from storage to flatbed to freearm positions)

Air Lift Operation Instruction

RAISING PLATFORM -


- ① Push down on the platform until you hear the click sound.
- ② Gently let the platform raise back up by itself to the next stage. [i.e. flat-bed / free-arm]

LOWERING PLATFORM -

- ① Push down on the platform until you hear the click sound.
- ② Gently let the platform raise back up until you hear a second click.
- ③ Then push down until you reach the next position where you will also hear a click.
- ④ Gently let go to leave the platform in this position.


Failing this, please contact the dealer you purchased it from.
They should be able to help.

FREE-ARM POSITION - Cabinet is supplied with the position adjusted.
(User not necessary to adjust this free-arm position)

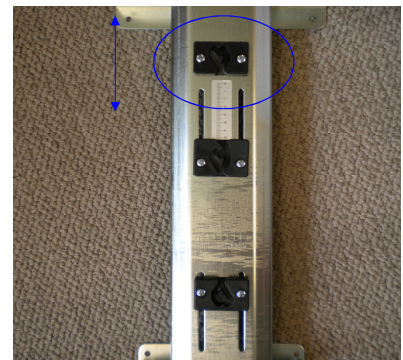


Adjust Plastic Holder move up / down by using Screwdriver

FLAT-BED POSITION - Adjust so your Machine and Working Area are perfectly flat.

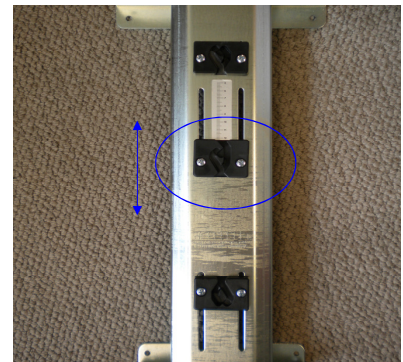

Adjust Plastic Holder move up / down by using Screwdriver

STORAGE POSITION - Adjust platform so your Machine can perfectly sit inside cabinet after door and lid is closed.

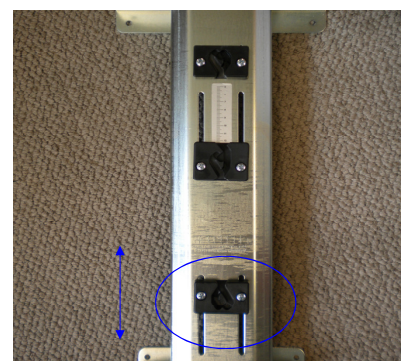

Adjust Plastic Holder move up / down by using Screwdriver