


Clothsetter 10000

Clothsetter 10000 is used for the following machines:
10000, 10001, 300E, 350E, 9500, and 9700

Use the Clothsetter when combining individual designs to make one large embroidered design.

Before using the Clothsetter, an initial adjustment is necessary.

1. Positioning lines for the Memory Card designs via Card Reader.
2. Positioning lines for embroidery sewing (Built-in designs, PC Cards designs, etc.)
3. Arrow indicates the top side of the pattern position
4. Standard setting position holes
5. Large Hoop B setting position
6. Positioning screws
7. Standard Hoop A and Free Arm Hoop C setting position

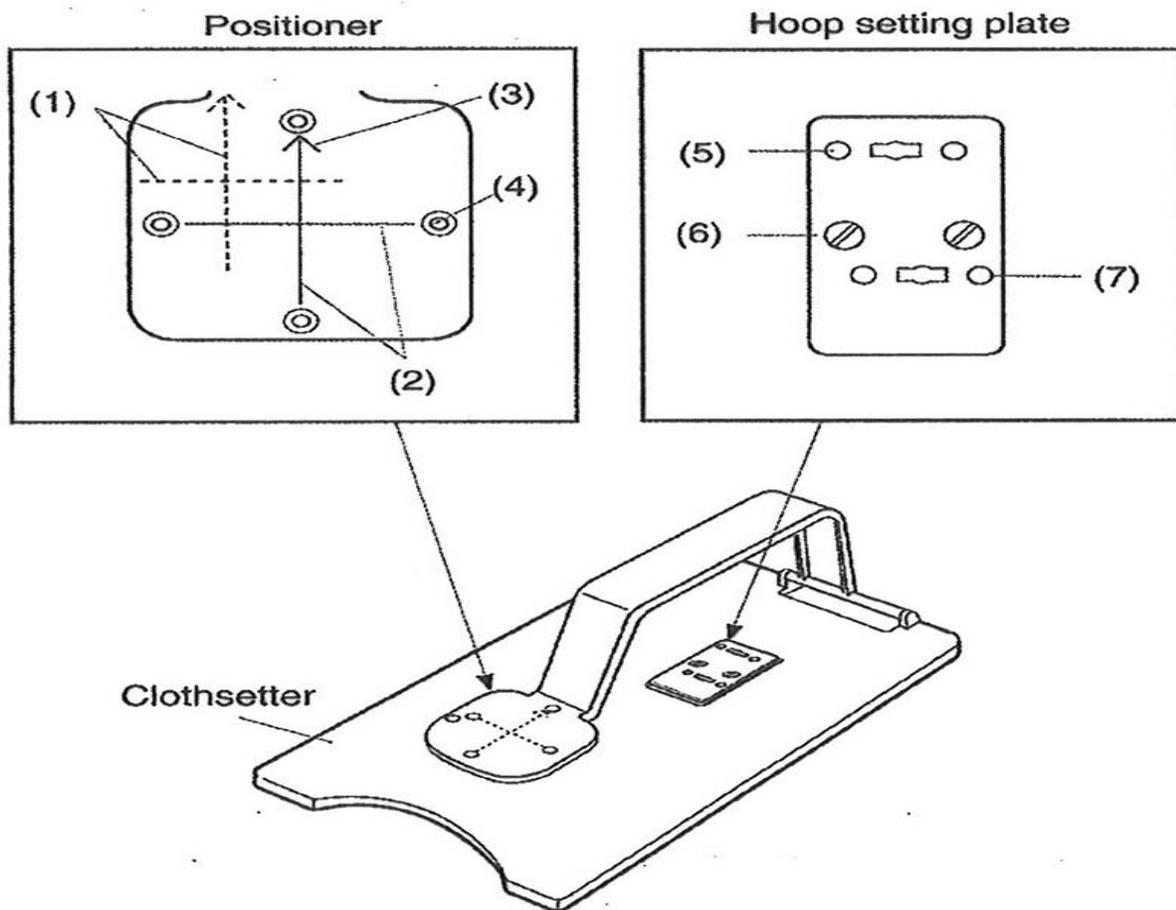


Adjusting the Clothsetter

To adjust the clothsetter, use the built in adjustment pattern on your machine. The adjust pattern for 10000 & 10001, is show below.

1. Press Embroidery Mode Key
2. Select adjust pattern (#14 is shown in picture for MC10000 & 10001)
3. Attach fusible interfacing to your fabric, then set the fabric in the Standard Hoop A and sew.

- Do not use a stretchy material like knits.

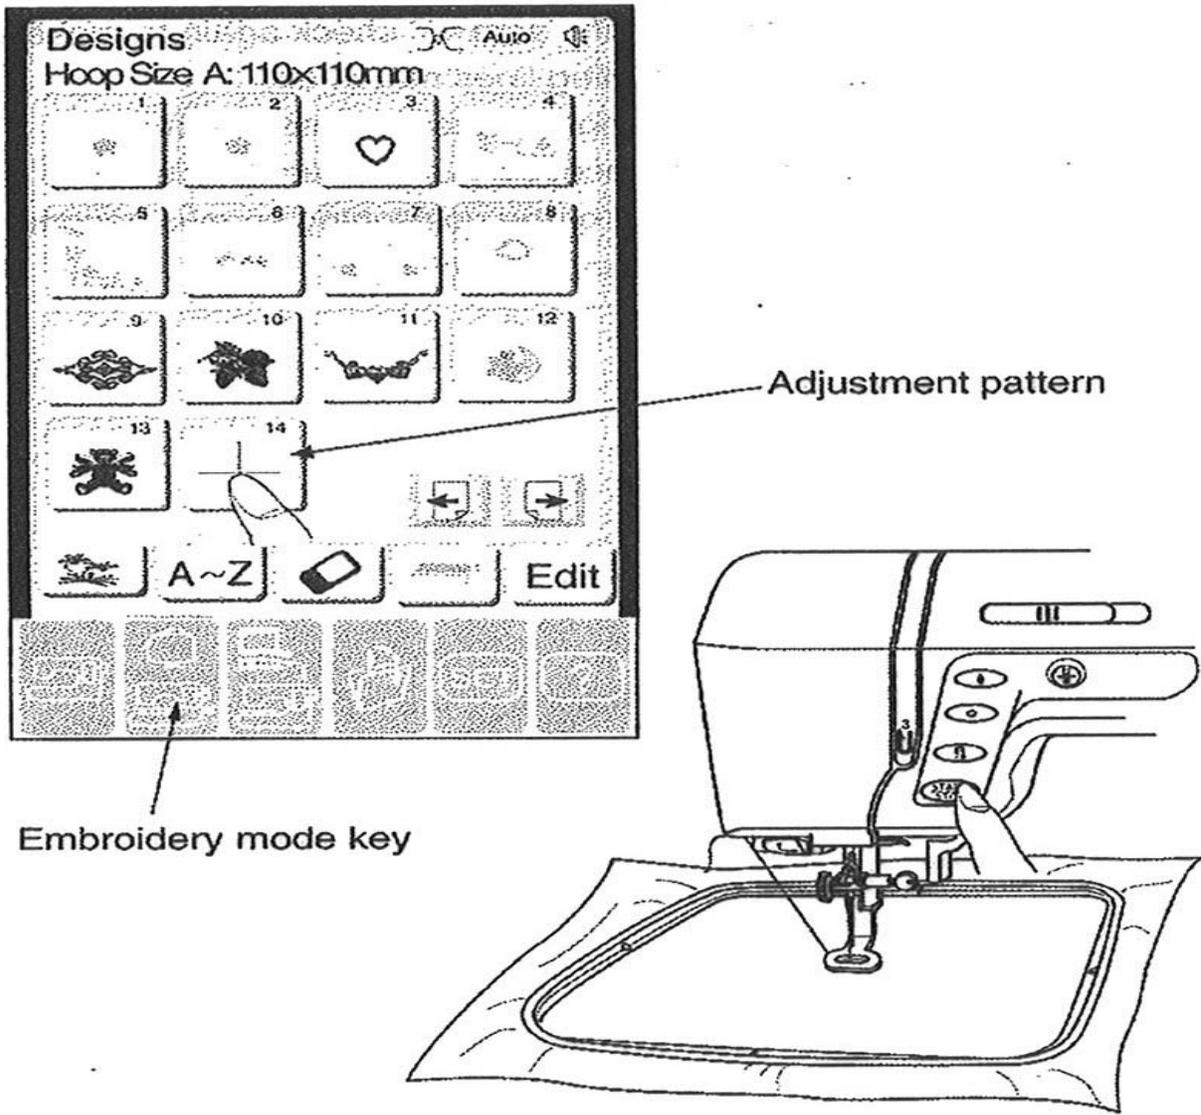


Adjustment pattern for MC9500 is # 81

Adjustment pattern for MC9700 is # 88


Adjustment pattern for MC300E and 350E is # 81

Note that the above machine screen will look different than pictured

4. Remove the hoop from the carriage with the fabric still in the place and attach it to the hoop holder.
 - Leave the positioning screws loose.

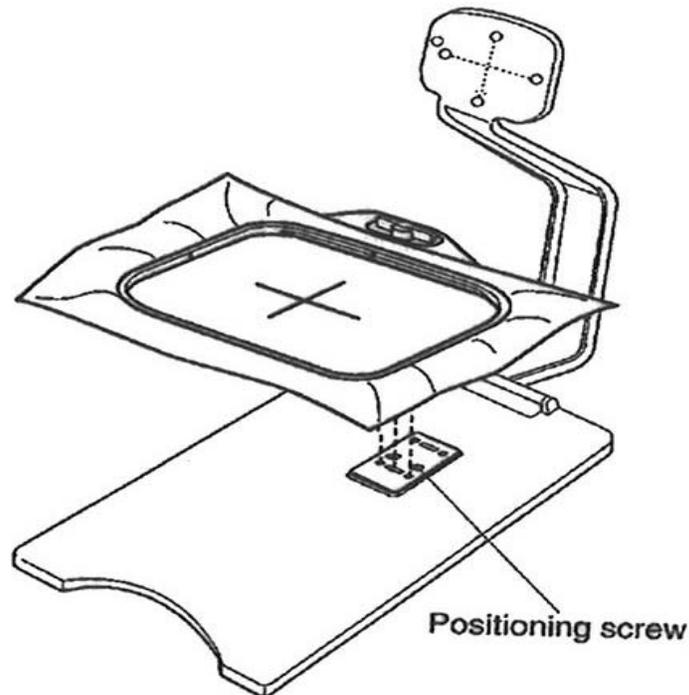

5. Swing the positioning arm down on the fabric. Match the lines of the adjustment patten that you just sewn with the lines on the positioner by adjusting the hoop holder.
Tighten the two positioning screws.
 - After tightening the screws, check again to make sure the positioning lines match up.

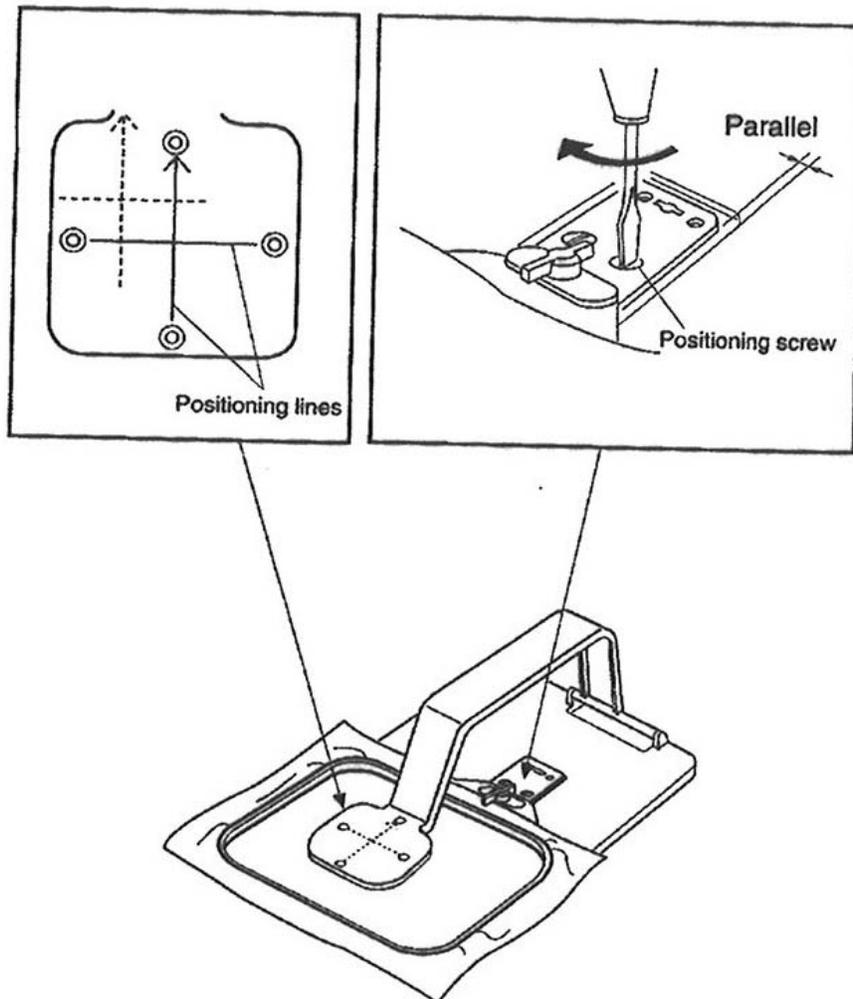

- Once the hoop holder has been set, no more adjustment is necessary unless another sewing machine is used or the positioning screws become loose.