


FL700


www.krups.com

EN
FR
ES



KRUPS

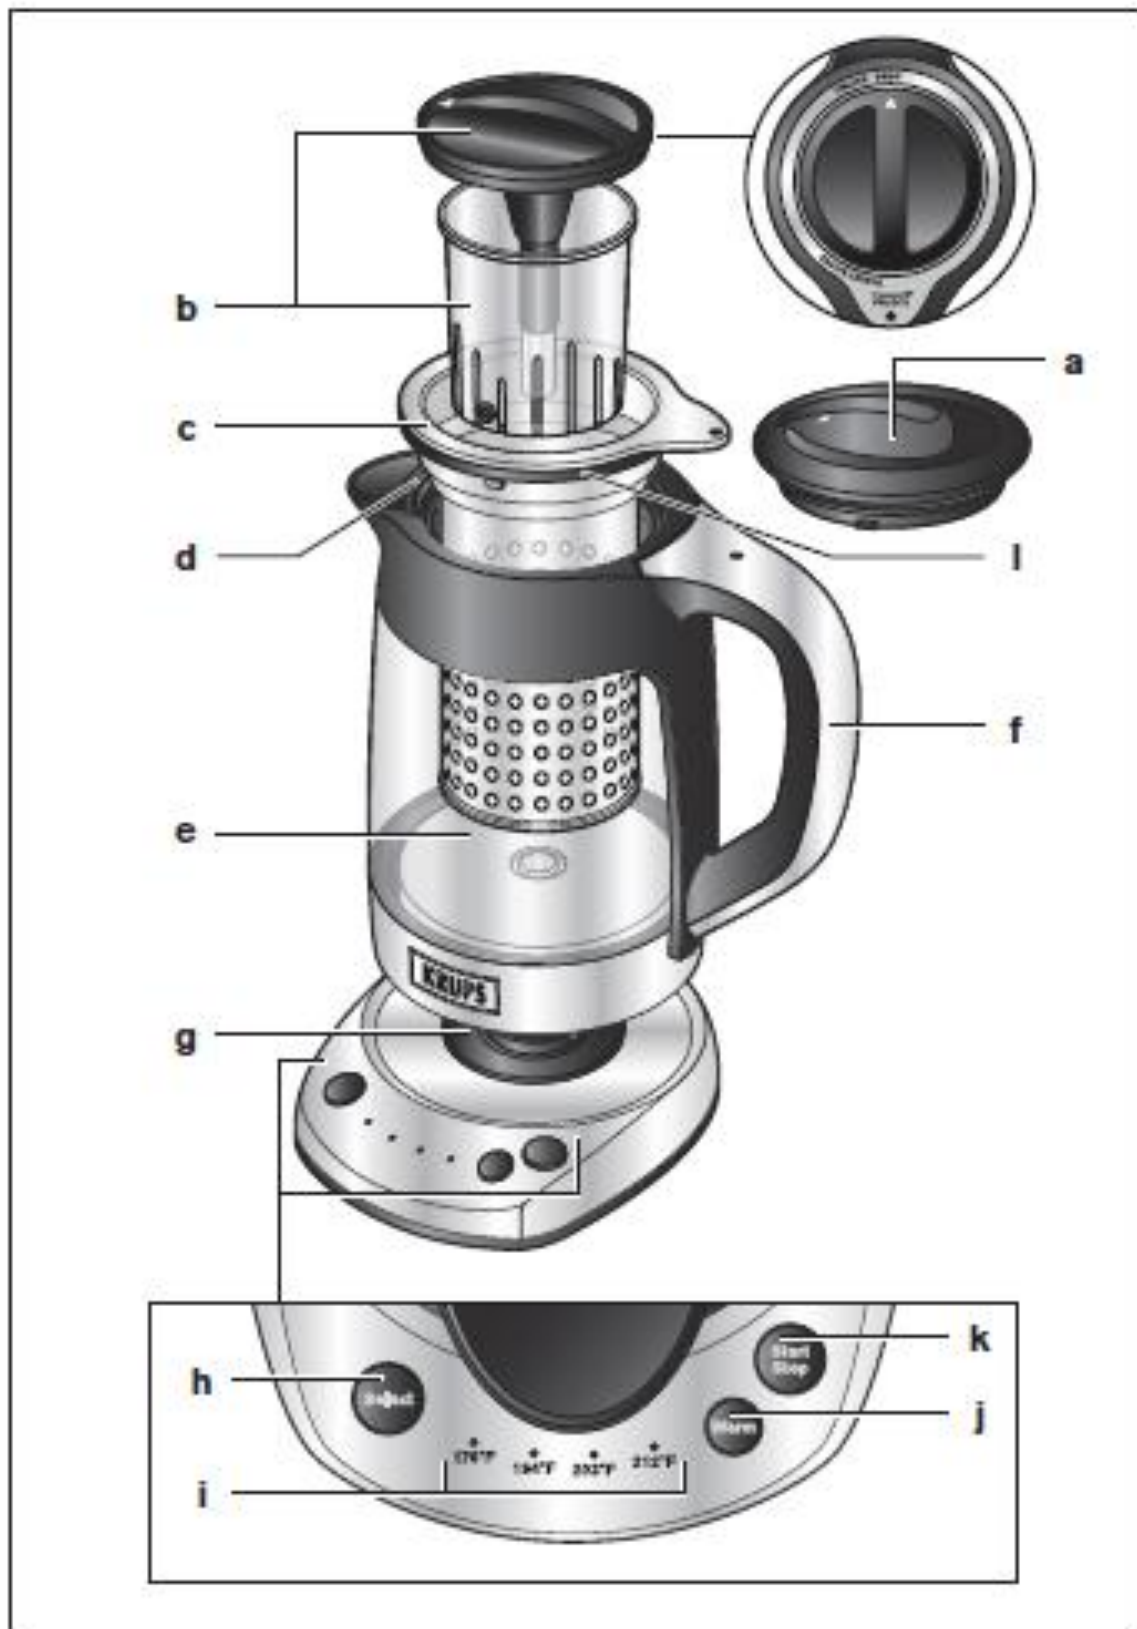 

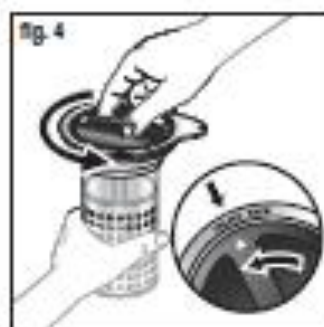 

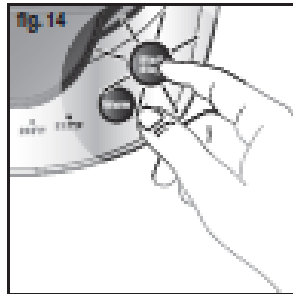 
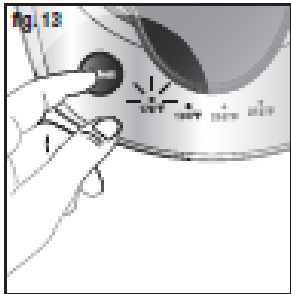 


TABLE OF CONTENTS


1. DESCRIPTION	p.	4
2. BEFORE FIRST USE.....	p.	4
3. INSTRUCTIONS FOR USE	p.	4
4. CLEANING	p.	5
5. DESCALING	p.	5
6. TROUBLESHOOTING.....	P.	6
7. DISPOSING OF YOUR APPLIANCE.....	P.	6
8. MANUFACTURER'S WARRANTY	p.	7


IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following :

1. Read all instructions prior to first use.
2. Do not touch hot surfaces. Do not touch the glass carafe during and just after heating cycle. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs or machine in water or other liquid.
4. Not intended for use by children.
5. Close supervision is necessary when any machine is used near children. Keep machine out of reach of children.
6. This appliance is not designed to be used by children or people without knowledge or experience with the product, unless they are supervised or given prior instructions concerning the use of the appliance by someone responsible for their safety.
7. Children must be supervised to ensure that they do not play with the appliance.
8. Burns can occur from touching hot plate, hot water or steam. Exercise caution.
9. Unplug machine from outlet when not in use and when cleaning. Allow to cool before putting on or taking off parts, before cleaning the machine, and before storing.
10. All machines are subject to stringent quality control. Practical tests using machines taken at random are conducted and this may explain any slight marks or tea residue prior to use.
11. Do not operate any machine with a damaged cord or plug or after the machine malfunctions, or has been damaged in any manner. Return machine to the nearest Krups Service Center for examination, repair or adjustment or your respective countries Consumer Service Department.
12. To reduce the risk of injury do not drape cord over the counter top or table top where it can be pulled on by children or tripped over accidentally.
13. Do not let cord hang over edge of table or counter, or touch hot surfaces.
14. The use of accessory attachments not recommended by Krups may result in fire, electric shock or injury to persons.
15. Do not use outdoors.
16. Do not place on or near a hot gas or electric burner, or in a heated oven.
17. To disconnect the machine, turn the control to "off" then remove plug from wall outlet. Do not yank cord, instead grasp plug and pull to disconnect.
18. Do not use the machine for other than intended use.
19. Do not pour liquids other than drinking water and descaling solutions specified in this manual into the carafe.
20. Protect the machine against humidity and freezing.
21. This machine is for household use only.
22. Only use your kettle for heating drinking water.
23. Never move the kettle glass while it is in operation.
24. Be sure that lids are assembled and fastened properly.
25. Scalding may occur if the lid is removed during the brewing cycle.

26. Do not use the carafe if glass is cracked or broken up.
27. If the carafe is broken, collect bits with caution, they could be hot and sharp.
28. Do not use the kettle without the kettle lid.
29. Do not fill up the kettle over the maximum volume (1L).

 **Do not touch the glass carafe during and just after heating cycle.**

 **No water shall be in contact with the carafe bottom connector.**

SAVE THESE INSTRUCTIONS

CAUTION

This machine is intended for household use only. Any servicing other than cleaning and user maintenance should be performed by the nearest authorized Krups Service Center. Visit our website at www.krupsusa.com in the USA or www.krups.ca in Canada or contact your respective country's Consumer Service department for the service center nearest to you.

To reduce the risk of fire or electric shock, do not attempt to disassemble the machine. Repair should be done by an authorized Krups Service Center only.

SHORT CORD INSTRUCTIONS

- A.** We do not recommend using an extension cord with this device. A short power cord or a detachable power cord is provided to reduce the risks of becoming entangled in or tripping over a longer cord accidentally.
- B.** If an extension cord is absolutely necessary,
 - 1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the machine,
 - 2) the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- C.** This machine has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

In the interest of improving products, Krups reserves the right to change specifications without prior notice.

1. DESCRIPTION

a	Kettle lid	g	Power base
b	Small filter	h	Temperature button
c	Large filter	i	Temperature indicator
d	Spout filter	j	Keep warm button
e	Glass carafe	k	Start / Stop button
f	Handle	l	Silicone joint

2. BEFORE FIRST USE

- First boil a full kettle of water to clean the kettle. Throw this water away.

3. INSTRUCTIONS FOR USE

3.1 Making tea

- The kettle should only be used for boiling water or tea. Never fill it with other liquids or ingredients other than water.
- To fill the kettle, remove it from the power base and remove the large filter. **Fig. 1 and 2.**
- Fill the kettle with water to the maximum fill line. **Fig. 3.**
- Turn the lid until the arrow is in UNLOCK position and lift out the small filter. Put the tea leaves or bags in the bottom of the filter. **Fig. 4,5 and 6.**
- Place the small filter in the large filter. Then turn the lid to the left until the basket is raised. The small filter must be in high position for brewing. **Fig. 7 and 8.**
- Now that the small filter is in place, place the large filter onto the carafe in such a way as the two parts (large filter and carafe) fit together and turn until the 2 red spots are aligned. **Fig. 9 and 10.**
- Place the carafe onto the base. Plug the unit in. **Fig. 11.**
- Press the Start/Stop button to turn the kettle on. **Fig. 12.**
- Press Select and choose the temperature you wish: 176°F - 194°F - 203°F - 212°F. The LED will light up. **Fig. 13.**

Please refer to the chart below for the brewing temperature and time per tea type. For information only.

Tea type	Temperature	Brewing time
White tea	~ 176°F	4 to 6 minutes
Green tea	~ 176°F	2 to 4 minutes
Yellow tea	~ 176°F	1 to 3 minutes
Oolong tea	~ 194 to 203°F	5 to 7 minutes
Black tea	212°F	4 to 6 minutes
Red tea (rooibos)	212°F	3 to 5 minutes
Tisane/herbal tea	212°F	2 to 5 minutes

- Press the Start/Stop button again to begin the cycle. The Start/Stop button should turn blue. **Fig. 14.**
- When the boiling cycle is finished, turn the small filter lid to right until it is aligned with the "BREW" marking of the large filter. At this stage, the small filter is in the lower position. **Fig. 15.**

3.2 Boiling water

To boil water, you do not need the small and large filters.

- Remove the kettle from the base and remove the small and large filter (only use the kettle lid when boiling water).
- Fill the carafe with water (maximum level 1L).
- Place the kettle lid onto the carafe. **Fig. 16.**

- Place the carafe onto the base. Plug the unit in.
- Press the Start/Stop button.
- Press Select and choose the temperature you wish : 176°F - 194°F - 203°F - 212°F. The LED will light up.
- Press the Start/Stop button to begin the cycle. The Start/Stop button will turn blue.



Do not use the kettle without the kettle lid.

3.3 Keep warm function

The tea or the water can be kept warm for 1 hour at a temperature of 167°F or higher, depending on the original temperature you had selected in the first place

- Press the keep warm button to activate this function.
- It will automatically go off after 1 hour. However, you can stop it at any time by pressing the keep warm button again.
- The indicator light will go off.

4. CLEANING

- First unplug the appliance and let the kettle cool down.
- The outside can be wiped with a damp cloth. A dry cloth should always be used to clean the base.
- Do not immerse the appliance in water or any other liquids.
- A normal color will appear over time in the small and large filter due to the tea, in spite of regular cleaning.
- Do not use aggressive or abrasive cleaning agents to clean the appliance
- Do not clean the appliance in the dishwasher. It is strictly prohibited to put the small and large tea baskets in a dishwasher. It is also prohibited to put any other removable parts of the appliance or accessories in a dishwasher.

5. DESCALING

For best performance, we suggest to descale every 3 months. It could be necessary to descale more often, the amount of scale that develops depends on the hardness of your water and how frequently the kettle is used.

To descale your kettle:

- Always unplug the base and allow the kettle to cool before descaling.
- Fill the kettle with water to the maximum fill line.
- Add a suitable descaling agent (for the quantities, please refer to the agent packing) in the water and blend during few seconds.



Do not use vinegar or vinegar concentrate to descale the appliance.



Do not use citric acid to descale the appliance.

Never use another method for descaling than that recommended.

6. TROUBLESHOOTING

PROBLEM	SOLUTION
When I press the start/stop button nothing happens	Remove the carafe from the base and place it back.
	Check that your appliance is placed flat on the base and that the base is plugged in.
	Unplug the base and plug it in again, press the start/stop button. If the button light does not turn on, please consult your nearest KRUPS after sales service center.
	If your appliance was used without water: leave the appliance to cool for a few minutes and allow the safety override to reset. Fill the carafe with water and turn on, the appliance will begin to operate after the safety override has reset.
The water has a plastic taste	This usually happens when the product is brand new. Discard the water you boil the first few times. If the problem persists, fill the kettle up and add two teaspoons of baking soda. Boil the water and discard it. Rinse the carafe.
If the product has fallen, if it is leaking, or if the power cord, plug or base are visibly damaged	Consult the nearest KRUPS After Sales Service Center and the warranty included at the end of these instructions.
	Do not use the appliance. No attempt should be made to disassemble the product or override the safety devices. If the power cord is damaged, it must be replaced by the manufacturer, a KRUPS After Sales Service Center, or any person with similar qualifications.
I cannot lock properly the large filter in the kettle.	Please check the Silicone joint (I) is properly adjusted in its ribs located in the upper side of the large filter. If the Silicone joint (I) has been incidentally removed, please place it back in its rib. Please refer to the DESCRIPTION section."

7. DISPOSING OF YOUR APPLIANCE



Your appliance contains valuable materials which can be recycled. Consult your local waste collection center for correct disposal procedure and recycling options.

8. MANUFACTURER'S WARRANTY

 : www.krups.com

With a strong commitment to the environment, most of Krups products are repairable during and after the warranty period. Before returning any defective products to the point of purchase, please call Krups consumer service directly at the phone number below for repair options.

Your help to sustain the environment is appreciated!

The Warranty

This product is guaranteed by Krups for a period of **2 years** against any manufacturing defect in materials or workmanship, starting from the initial date of purchase.

The manufacturer's warranty by Krups is an extra benefit which does not affect consumer's Statutory Rights.

The Krups warranty covers all costs related to restoring the proven defective product so that it conforms to its original specifications, through the repair or replacement of any defective part and the necessary labor. At Krups's choice, a replacement product may be provided instead of repairing a defective product. Krups's sole obligation and your exclusive resolution under this warranty are limited to such repair or replacement.

Conditions & Exclusions

The Krups warranty only applies within USA, Canada & Mexico, and is valid only on presentation of a proof of purchase. The product can be taken directly in person to an authorized service centre or must be adequately packaged and returned, by recorded delivery (or equivalent method of postage), to a Krups authorized service centre. Full address details for each country's authorized service centre are listed on the Krups website (www.krups.com) or by calling the appropriate telephone number listed below to request the appropriate postal address.

Krups shall not be obliged to repair or replace any product which is not accompanied by a valid proof of purchase.

This warranty will not cover any damage which could occur as a result of misuse, negligence, failure to follow Krups instructions, use on current or voltage other than as stamped on the product, or a modification or unauthorized repair of the product. It also does not cover normal tear and wear, maintenance or replacement of consumable parts, and the following:

- using the wrong type of water
- scaling (any de-scaling must be carried out according to the instructions for use);
- ingress of water, dust or insects into the product;
- mechanical damages, overloading
- damages or bad results due to wrong voltage or frequency
- accidents including fire, flood, lightning, etc
- professional or commercial use
- damage to any glass or porcelain ware in the product

This warranty does not apply to any product that has been tampered with, or to damages incurred through improper use and care, faulty packaging by the owner or mishandling by any carrier.

The Krups manufacturer's warranty applies only for products purchased and used in USA, Canada & Mexico. Where a product purchased in one country and then used in another one:

- a) The Krups guarantee duration is the one in the country of usage of the product, even if the product was purchased in another listed country with different guarantee duration.
- b) The Krups guarantee does not apply in case of non conformity of the purchased product with the local standards, such as voltage, frequency, power plugs, or other local technical specifications
- c) The repair process for products purchased outside the country of use may require a longer time if the product is not locally sold by Krups
- d) In cases where the product is not repairable in the new country, the Krups guarantee is limited to a replacement by a similar product or an alternative product at similar cost, where possible.

Consumer Statutory Rights

This Krups manufacturer's warranty does not affect the statutory rights a consumer may have or those rights that cannot be excluded or limited, nor rights against the retailer from which the consumer purchased the product. This warranty gives a consumer specific legal rights, and the consumer may also have other legal rights which vary from State to State or Country to Country or Province to Province. The consumer may assert any such rights at his sole discretion.

Additional information

Accessories, Consumables and end-user replaceable parts can be purchased, if locally available, as described in Krups internet site.

CANADA	GROUPE SEB CANADA 345 Passmore Avenue Toronto, ON M1V 3N8	MEXICO	Groupe SEB MEXICO S.A. de C.V. Goldsmith 38 Desp. 401 Col. Polanco Delegacion Miguel Hidalgo 11 560 Mexico D.F. MEXICO	U.S.A.	GROUPE SEB USA 2121 Eden Road Millville, NJ 08332
	1-800-418-3325		01800 1128325		800-526-5377

 : www.krups.com