


General HotKeys		Object Editor	
Main Functions		Selection	
New design(1)	Ctrl + N	Select next object	Tab
Open design(1)	Ctrl + O	Select previous object	Shift+Tab
Save design(1)	Ctrl + S	Invert selection	Num-/Ctrl+Shift+I
Print design(1)	Ctrl + T	Select all	Num+/Ctrl+A
Close design(1)	Ctrl + F4	Deselect all	Ctrl+Shift+A
Close program(1)	Alt + F4	Hide object(s)	H
Help(1)	F1	Show object(s)	Ctrl+H
Show Help on...	Shift+F1	Group	Ctrl+G
Undo changes(1)	Ctrl + Z	Ungroup	Ctrl+U
Redo changes(1)	Ctrl+Shift+Z	Transform	
Backdrops		Move object(s) 1/10mm	← ↑ ↓ →
Hide backdrop	Alt + 1	Move object(s) 1mm	Ctrl + ← ↑ ↓ →
Show backdrop	Alt + 2	Delete object(s)	Del
Faded backdrop	Alt + 3	2-point copy	K
Backdrop on top	Alt + 4	Join objects	Ctrl+ J
Viewing Tools		Break apart	Ctrl+B
Crosshair	C	Repeat last change	R
Grid(1)	G	Add new objects to end	Ctrl+Shift+E
Zoom in	Z	Copy object(s)	Ctrl+C / Ctrl+Ins
Zoom previous	Shift + Z	Cut object(s)	Ctrl+X / Shift+Del
Zoom all(1)	A	Paste object(s)	Ctrl+V / Shift+Ins
Show / Hide roll-ups	Space	Other	
Measure(1)	Shift+Right Click	Duplicate design	Ctrl+D
3D Preview	P	Duplicate (Click & drag)	D
Lasso Selection tool	L	Rearrange	
Design Info	Ctrl + I	To end	Home
Switch to		To front	End
Object editor	B	1 step backward	Page Down
Stitch editor(3)	M	1 step forward	Page Up
Node editor	N	Select Special function-Needle colors	
Next Design	Ctrl+Tab	Select Needle [1] to [10]	1,2,3...9,0
Previous Design	Ctrl+shift+Tab	Select Needle [11] to [20]	Shift+1,2...9,0
(1) These shortcuts do not work during Venere Cutting (2) Not active in Stitch editor (3) Not active in Node editor		Thread Trim	Ctrl+1
Digitize Venere Cutting		Stop	Ctrl+2
Insert Options		Needle up	Ctrl+3
Text	T	Frame out/in	Ctrl+4
Shapes	S	Sequin	Ctrl+5
		Borer	Ctrl+6
		Applique	Ctrl+7
		Low Speed	Ctrl+8
		Advance Borer depth	Ctrl+9
		Deselect All Special Functions	Ctrl+0
		Insert object split	Ctrl+'
		Move Start and End points	X

Artistic Sewing Suite Quick Reference Card

View		General	
Properties	Alt+Enter	New document	Ctrl+N
Zoom in	Z	Open document	Ctrl+O
Zoom previous	F3	Save document	Ctrl+S
Zoom all	F4	Save As document	Ctrl+Shift+S
100% zoom	Shift+1	Print document	Ctrl+P
Hand tool (pan)	H	Export to image	Ctrl+Shift+E
Measure	F9	Export to SVG	Alt+E
Ruler	Ctrl+Shift+R	Help	F1
Grid	Ctrl+Shift+G	Show Help on...	Shift+F1
Backdrop		To Editor...	Ctrl+E
Hide	Alt+1	Selection	
Below Embroidery	Alt+2	Select all	Ctrl+A
Washed-out	Alt+3	Invert selection	Ctrl+Shift+I
After Embroidery	Alt+4	Default selection tool	Space
Designing		Top object	Home
Insert symbol	Ctrl+F11	Bottom object	End
Delete objects	Delete	Next object	Tab
Edit shape nodes	F10	Previous object	Shift+Tab
Freehand	F5	Modifications	
Bezier	Shift+F5	Undo	Ctrl+Z
Outline	Ctrl+F5	Redo	Ctrl+Shift+Z
Rectangle	F6	Select fabric	Ctrl+F
Trapezoid	Shift+F6	Edit palette	Ctrl+Shift+L
Ellipse	F7	Options	Ctrl+T
Pie	Shift+F7	Change Hoop	Ctrl+H
Polygon	Y	Optimize r options	Ctrl+J
Star	S	Divide	Shift+D
Text	F8	Directions	D
Align bar		Repeat last transform	Ctrl+R
Align Left	L	Group	Ctrl+G
Align Right	R	Ungroup	Ctrl+U
Align Top	T	Combine	Ctrl+L
Align Bottom	B	Break apart	Ctrl+K
Align centers Horizontally	C	Convert to curves	Ctrl+Q
Align centers Vertically	E	Order	
Same width	Shift+W	To front one	PgUp
Same height	Shift+H	To back one	PgDn
Same Size	Shift+S	To front of design	Home
Horizontal Spacing	Shift+C	To back of design	End
Vertical Spacing	Shift+E		

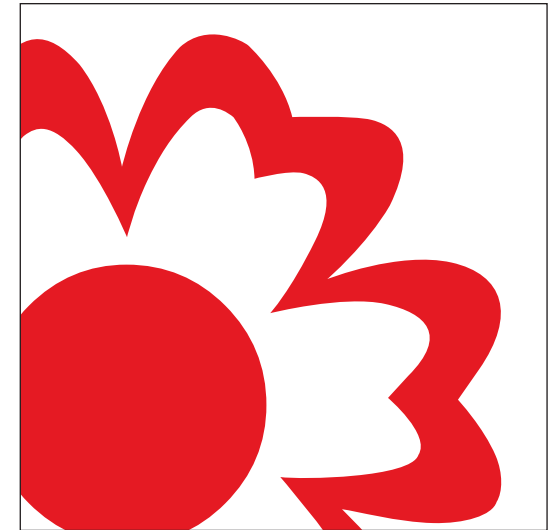

Artistic™
Sewing Suite

Quick Start Guide

For Installing & Customizing
the software

Dongle ID: _____
This is the number printed on the plastic bag
the dongle was packaged in. This number is
required for all customer service questions.

Software Installation Steps

Insert the Creative DRAWings® installation CD into your CD-ROM drive. It is recommended that you close all running programs before you proceed.

If your computer does not have the CD-ROM AUTORUN feature activated, open Windows Explorer and from the CD-ROM drive run the “setup.exe” program.

If you are running the installation in Windows Vista operating system and you have the User Account Control option enabled, a Security screen will appear informing you about the new software and will ask you if you allow it to be executed. You need to either log in as administrator or select Allow if you are already logged in as administrator.

It is important to keep the hardware key unplugged until instructed. Click Next.

2) When the License Agreement window opens:

Click on the first button of the window, confirming that you accept the terms of the license agreement. (CAUTION! PLEASE READ CAREFULLY THE TERMS & CONDITIONS OF THE LICENSE AGREEMENT). Then click the Next> button.

3) On the next window you can change the Destination Folder by clicking on the Change button and select another directory to install Creative DRAWings® software, or keep the current one. Click Next > to continue

4) On the next window select the installation type:

a) If you choose Complete, all program features will be installed automatically. If you press the Next> button the installation procedure will go to step 6.

b) If you choose Custom, you have to specify which features of the program you want to install. (Recommended only for experienced users). Make the changes you want and click the Next> button.

6) Click Install for the installation process to begin.

7) The next window will instruct you to plug in the hardware key (Dongle). Once it is plugged in, click ok. Plug in the key (Dongle) and press the OK button. Wait until the installation recognizes the key (Dongle) and proceeds.

8) The Registration Information window will appear. This window is a form that you should fill in with valid information and send back to us by clicking on the Send E-Mail button. *NOTE:* You must be connected to the internet to complete. To learn how we use your information, please read our Privacy Policy.

9) Click Finish to complete the installation of Creative Drawings. Wings modular software will automatically launch within 1-2 minutes. Click Finish to automatically continue with the installation of Wings® modular software.

10) The Welcome window of Wings' modular® Basic software will appear. Click Next>.

11) When the License Agreement window opens: Click on the first button of the window, confirming that you accept the terms in the license agreement. (CAUTION! PLEASE READ CAREFULLY THE TERMS & CONDITIONS OF THE LICENSE AGREEMENT). Then click the Next> button.

Enter your user name and the name of the organization to the window that appears next. Next, choose if you want to install Wings' modular® software for all users that have access to the current computer or only for the user who is currently logged in. Click Next>.

The next window will show you where Wings' modular® software will be installed. Click Next>.

14) Leave Complete checked and Click Next >.

15) Click Install for the installation process to begin.

16) The window informs you that Wings' modular® was installed successfully.

17) If an additional installation wizard starts to install DirectX9c, you MUST allow it to install or Creative DRAWings® software will not work properly. Just follow the directions until it is finished installing.

If the Direct X9c installation wizard did not appear, you already have it installed on your system.

Now Creative DRAWings® software is installed in your computer. To execute/run the software, open the Windows Start menu, click on All Programs > Creative DRAWings® and then click on Creative DRAWings 5

Customize 3D properties of your graphics card
If you experience any problems in opening Creative DRAWings® you may need to adjust the Config3D of the software.
For more information about how to config3D look at the installation guide (InstallationGuide.pdf) which you will find in the root of Creative DRAWings® installation CD or inside the Creative DRAWings® manual.

Registering the Software

During the installation of the Software, you will be asked to register it by filling out the Software Registration Form. You can also access the Registration Form outside the installation process by opening the Windows Start menu, clicking on All Programs > Creative DRAWings and then clicking on Register Creative DRAWings 5.

The registration process is completed after you have sent your Software Registration Form to:
DRAWstitch Ltd. by e-mail register@drawstitch.com.

Notice: Registering the Software is not obligatory though it is a prerequisite in case you want to upgrade your version of the Software with the latest one, at a special upgrade-price.

Software Manual

The manual is in Adobe PDF format, so that it can be read on-screen or printed.

To execute/run the manual file, you must have the Adobe Acrobat Reader installed. In case you do not have it installed, execute/run from the Creative DRAWings® CD-folder /Acrobat/ “AdbRdr910_en_US_Std.exe”.

You can also download the latest Adobe Acrobat Reader® from: <http://www.adobe.com/products/acrobat/readstep2/html>

Wings' modular Quick Reference card

Stitch Editor			
Selection		Basic Stitch editing	
Go to first stitch of next object	Tab	Insert stitch	Ins
Go to first stitch of previous object	Shift+Tab	Insert stitch at start	Num+
Go to first stitch of the current object	↓	Delete stitch	Del
Go to next object	↑		
Go to next stitch	→		
Go to previous stitch	←		

HELPFUL TIPS:

STABILIZERS:

In the Creative DRAWings Module, when using the design wizard, stabilizers are recommended and selected automatically when the fabric choice is made. To view fabric and recommended stabilizers in the Wings' module, select the File tab, and then choose Design Info. Once the window appears, select the Summary tab.

DISENGAGING UPPER THREAD SENSOR:

In order for the designs created for Venere Cut to stitch correctly using the flat shank, color-coded cutwork needles, you will need to disengage the upper thread sensor on your machine. Please see the following instructions for a variety of embroidery machine types:

FOR STANDARD HOUSEHOLD EMBROIDERY MACHINES:

Please follow the sewing machine manufacturer's directions. If it is not possible to disengage the upper thread sensor, you will need to override the sensor with the help of a blocking device such as the included ruler. Please do not use cardboard. See www.artisticsewingsuite.com for additional information.

JANOME MB4 ONLY: For directions to disengage upper thread sensor, please refer to: www.artisticsewingsuite.com.

MULTI NEEDLE MACHINES: To disengage upper thread sensor for all other brands of multi needle embroidery machines please refer to the manufacturer's directions for disengaging the thread sensor and use the flat shank, color coded Venere needles.