

# Turning off the Thread Sensor on the Janome MB-4




To use the cutwork needles on the Janome MB-4, the thread sensors in the machine must be de-activated. Please follow these instructions very carefully.

1. Turn off the MB-4.
2. Press the Start/Stop Key and the Thread Cutter Key, and at the same time, turn the machine on with the Power Switch.



3. As soon as the window appears on the screen, it is safe to stop pressing the Start/Stop and Thread Cutter Keys.
4. The Thread Sensor Off key is on the bottom row, in the center.

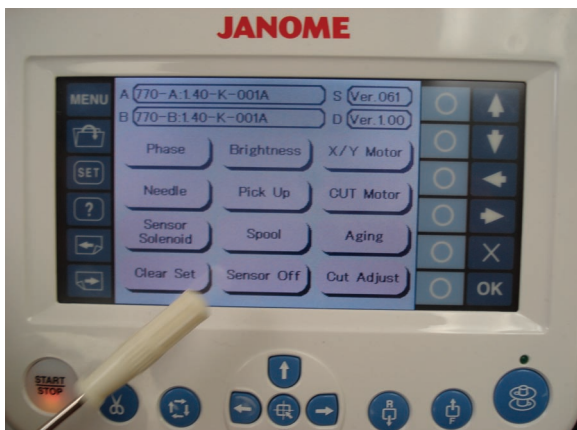

5. Press this key once to turn the thread sensors off.
6. To turn the thread sensors back on, simply turn the machine off and then power on. The machine defaults to the original settings.

## Important Notes:

Be sure to turn the thread sensors back on as soon as you finish your cutwork and embroidery project.

To ensure proper machine usage, be sure that the Tension Release Lever is set in the forward position (set to the position closest to the front face of the machine).



When changing the cutting needles, please be sure to use the tools provided to avoid injury.