 


KRUPS

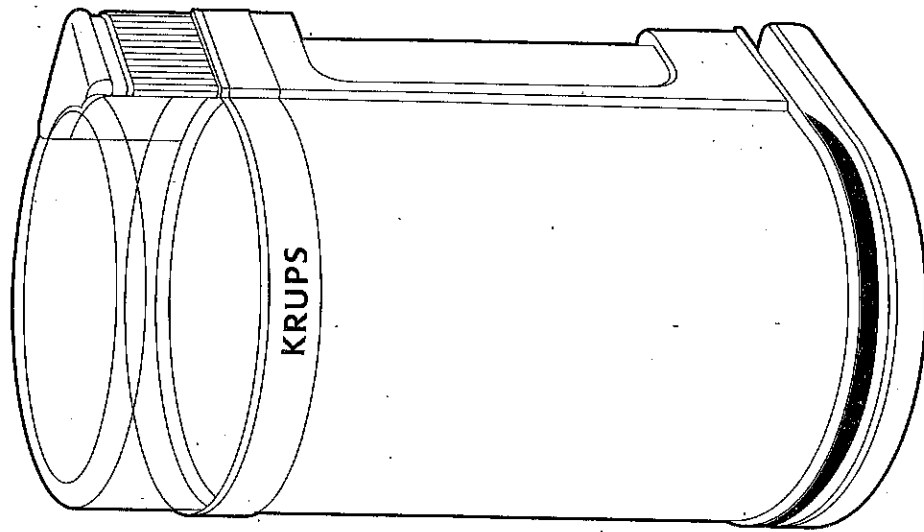

www.krups.com

KRUPS

MOLINO DE CAFE

 
Modelo : GX 4100 11

Características eléctricas : 120 V~ 60 Hz 200 W

INSTRUCTIVO DE OPERACION






Le invitamos a leer cuidadosamente este instructivo antes de usar su aparato, en el encontrará sus características e instrucciones para el mejor aprovechamiento del mismo.

Verifique que el voltaje de su instalación sea igual al de su aparato, el cual se indica en este instructivo.

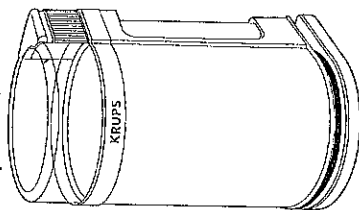

Comercializado por:
G.S.E.B.MEXICANA, S.A. de C.V.
Goldsmith 38-401 piso 4, Polanco Chapultepec,
Miguel Hidalgo C.P. 11 660 Mexico D.F.
Servicio al consumidor : 01 (800) 505 45 00
01 (800) 112 83 25

     www.krups.com

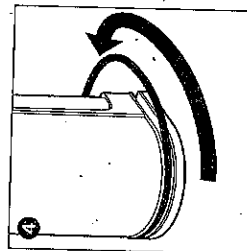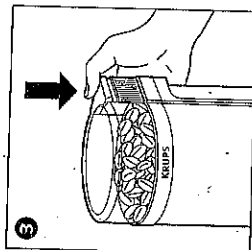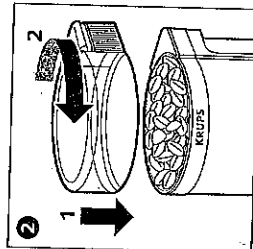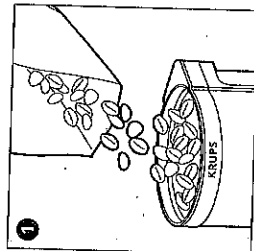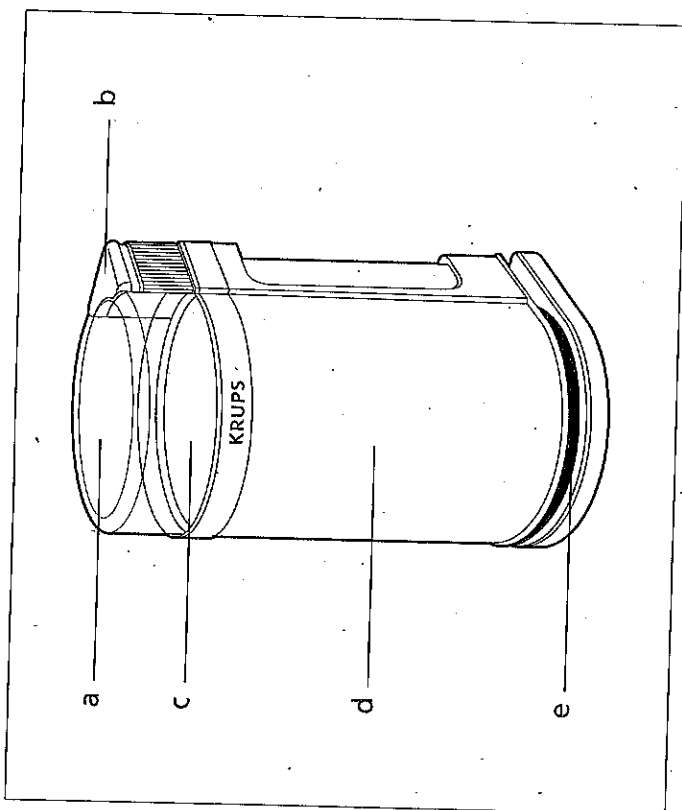

English

5

Français

10

Español

15

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following :

- Read all instructions.
- To protect against risk of electrical shock, do not put unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Do not remove lid until blade has stopped completely. After releasing the push button the blade will come to a stop within 2 to 3 seconds.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized KRUPS Service Center for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by appliance manufacturer may cause fire, electric shock or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter. Do not let cord touch any hot surfaces, including the stove.
- Do not use the appliance for other than intended use.
- Check milling bowl for presence of foreign objects before using.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance should be performed by the nearest authorized KRUPS Service Center (see guarantee of Performance).

Do not immerse base in water.

To reduce the risk of fire or electric shock, do not remove the base. No user serviceable parts inside. Repair should be done by an authorized KRUPS Service Center only.

SPECIAL CORD SET INSTRUCTIONS

Regarding your cord set :

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock this plug is intended to fit into a polarized outlet only one way. If the plug does not fully fit into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

Description

- a Grinder lid
- b Power button
- c Grinding chamber
- d Motor base
- e Cord storage

Introduction

Your Krups Chrome Touch coffee grinder allows you to grind your own coffee beans right in your own home. With such a variety of coffee beans available in supermarkets and gourmet shops, owning the Chrome Touch is sophisticated and economical. The best result, however, is that you get fresh coffee, every time!

Light roasted beans seem to be the most popular in North America, and dark roasts have been associated more with the heavier coffees, such as Espresso and Turkish. These dark roast, however, can also be brewed for «regular» coffee.

Coffee beans are also categorized as straight coffees or blends. The straight coffees consist of beans from a single area; blend consist of beans from several areas, which sometimes results in a superior coffee combination.

The best way to familiarize yourself with coffee is to purchase small quantities of several different varieties. Eventually, you will learn which beans and blends suit your personal taste. Perhaps you will soon start blending your own «house brands»!

Operation

- Place the base unit (d) on a sturdy countertop.
- Fill the grinding chamber (c) 1/2 to 3/4 with coffee beans (1).
- To calculate the amount of coffee beans to use, keep in mind that whole coffee beans yield the approximate equivalent in ground coffee (i.e. 1/4 cup beans = approx. 1/4 cup ground coffee).

- Place the lid (a) on the base and turn clockwise until firmly locked in place (2).
- Plug in the chrome Touch. To start grinding, press the power button (b) (3). The power will only stay on as long as the button is pressed.
- The degree of fineness you desire will decide how long you should grind. For example, a coarse grind would require less grinding time than a fine grind.

CAUTION

Wait until the blades have completely stopped before removing lid. Grinder should be unplugged before removing lid.

- When grinding is complete, unplug the unit. Turn the lid counterclockwise to remove the lid and pour the ground coffee into a bowl or canister. If you are grinding a large amount of beans, store the coffee in an airtight container.
- The cord can be wrapped around the base of the grinder for storage (4).

Coffee Tips

- Purchase coffee beans in small quantities.
- Store coffee beans in an airtight container in the freezer.
- Coffee beans do not need to thawed before grinding and/or brewing.
- Large ground quantities should be stored in an airtight container and placed in your refrigerator or freezer to maintain freshness.
- Follow the recommendations of your coffeemaker brand for brewing quantities. Adjustments should be made to suit your own personal taste.

Type of coffeemaker	Percolator	Regulator Auto Drip Coffeemaker	Krups Drip Coffeemaker
Quantity			
4-cups	4 Tbsp./ 4-6 sec.	4 Tbsp./ 5-7 sec.	4 Tbsp./ 11-13 sec.
8-cups	8 Tbsp./ 5-7 sec.	8 Tbsp./ 6-8 sec.	8 Tbsp./ 12-16 sec.
10-cups	10 Tbsp./ 5-8 sec.	10 Tbsp./ 7-9 sec.	10 Tbsp./ 15-17 sec.
12-cups	12 Tbsp./ 7-9 sec.	12 Tbsp./ 8-10 sec.	12 Tbsp./ 16-20 sec.

Grinding for Espresso/Cappuccino

The Krups Chrome touch (GX 4100) is acceptable for grinding beans for boiler type espresso machines. We do not recommend using the Chrome Touch to grind beans for use with pump espresso machines. Pump espresso machines require a disc type grinder such as the KRUPS «Il Barista» ref 220 or a similar, professional style espresso grinder. This type of grinder will prevent coffee dust which can impede the flow of water through the espresso machine.

Grinding Coffee

Grinding time depends on how coarse or fine a grind you desire. We do not recommend grinding coffee longer than 20 seconds. Longer use will not result in a finer grind, but in overheated coffee. As a result coffee will lose its flavor.

Cleaning

Keeping your Chrome Touch clean is essential in achieving optimal taste results. Most coffee beans contain oils that may, over time, become stronger in flavor and could affect the taste of your coffee.

Be sure that grinder is unplugged before cleaning!

- Remove all coffee after each grinding. A small soft brush or cloth is helpful in removing ground coffee from lid and blades.
- Wipe inside of grinder lid and blades very carefully with a damp cloth.
- Base unit can be wiped down with a damp cloth. NEVER immerse base unit in water or any other liquid!
- Lid can be washed in warm water, using a mild detergent, or be placed in the top rack of the dishwasher and used on gentle cycle.

Limited One Year Warranty

Your KRUPS GX 4100 is covered by the following warranty:

If from date of purchase within one year this KRUPS product fails to function because of defects in materials or workmanship, KRUPS will, at its option, repair or replace the unit with our charge, provided the owner has a proof of date of purchase.

This warranty will be void if malfunction was caused by damage to the product by accident, misuse, use on frequency or voltage other than marked on the product and/or described in the instructions, abuse including tampering, damage in transit, or use for commercial purposes. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.

LIMITED WARRANTY

This Krups' product is warranted for 1 year from the date of purchase against defects in material and workmanship. During this period, the Krups' product that, upon inspection by Krups, is proved defective, will be repaired or replaced, at Krups' option, without charge to the customer. If a replacement product is sent, it will carry the remaining warranty of the original product. This warranty does not apply to any defect arising from a buyer's or user's misuse of the product, negligence, failure to follow Krups' instructions, use on current or voltage other than that stamped on the product, wear and tear, alteration or repair not authorized by Krups, or use for commercial purposes.

THE WARRANTIES SET FORTH HEREIN ARE EXCLUSIVE AND NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR USE, ARE MADE BY KRUPS OR ARE AUTHORIZED TO BE MADE WITH RESPECT TO THE PRODUCT.

Some states do not allow limitation on how long an implied warranty lasts or do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. If you believe your product is defective, take the product (or send it postage prepaid) along with proof of purchase to the nearest authorized Krups Service Center. (To find the nearest authorized Krups Service Center visit the Krups website or contact the Krups Consumer Service in your country indicated below.) If you send the product, please include a letter explaining the nature of the claimed defect.

Krups Service Centre locations can be found by visiting the website www.krupsUSA.com in the USA or www.krups.ca in Canada.

When shipping the product to the service center please include a note explaining the issue, a copy of the sales receipt and provide a valid return address on the outside of the shipping box (no PO Boxes). If the product is out of warranty or warranty can't be validated, the service center will send an estimate of repair for your approval.

CONSUMER SERVICE

If you have additional questions, please call our Consumer Service Department. It is helpful to have the product available at the time of your call and to know the reference number that can generally be found on the base of the product.

USA

Phone 1-800-528-5377

Hours* Monday - Thursday from 8:00 a.m. - 6:30 p.m. (EST)

Friday from 8:00 a.m. - 6:00 p.m. (EST)

Letters should be addressed to

Krups

186 Boston Avenue

Medford, MA 02155

Only letters can be accepted at this address. Packages without a return authorization number will be refused.

CANADA

Phone 1-800-418-3325

Hours* Monday - Friday 8:30 a.m. - 4:30 p.m. (EST)

Letters should be addressed to

Groupe SEB Canada Inc.

455 Finchdene Square

Scarborough, Ontario M1X 1B7

*Please note hours are subject to change.