



**These are the (4)
screws that will need
to be loosened in
order to adjust the
location of the cap
frame driver on the
machine.**

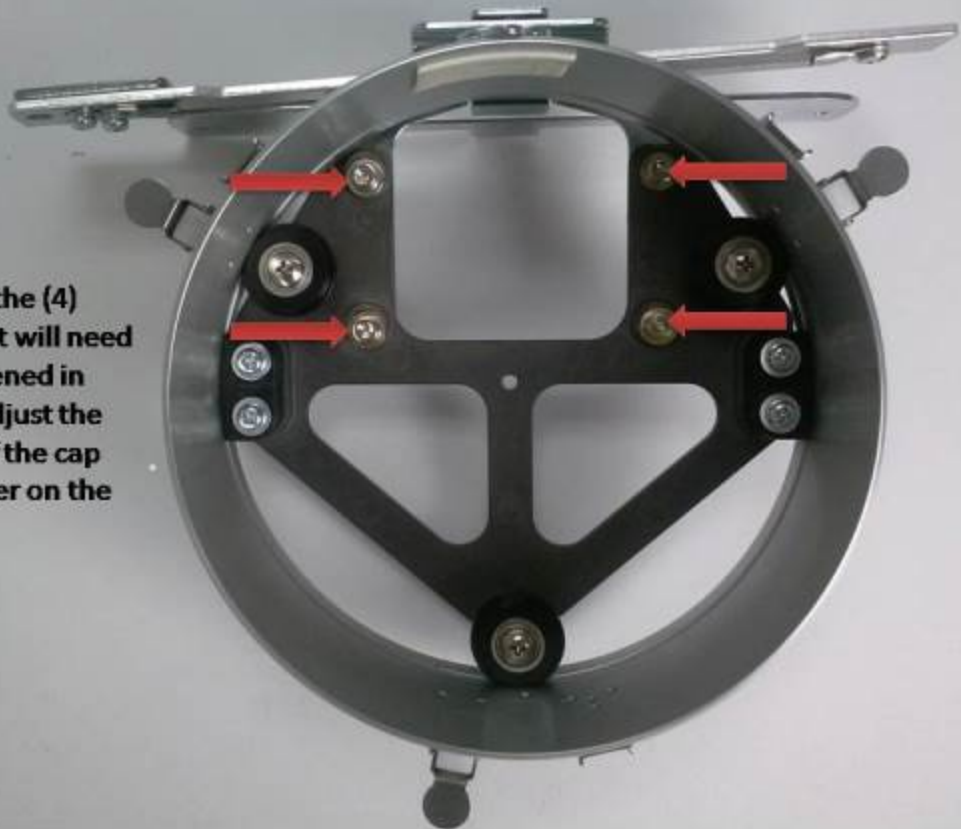

Attach the driver to the machine as you normally would and tighten down the gray thumb screws .


Loosen the (4) screws in (photo 1) just enough to allow the black colored driver ring support frame to move on the chrome colored mounting bracket.

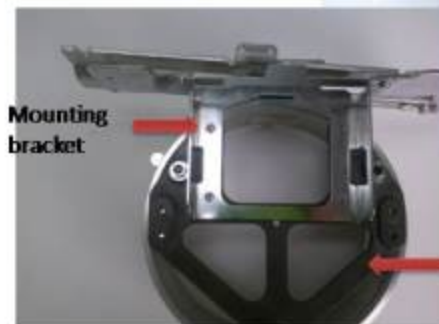

Mounting
bracket

Driver ring
support

Note that the actual adjusting movement will be very small.

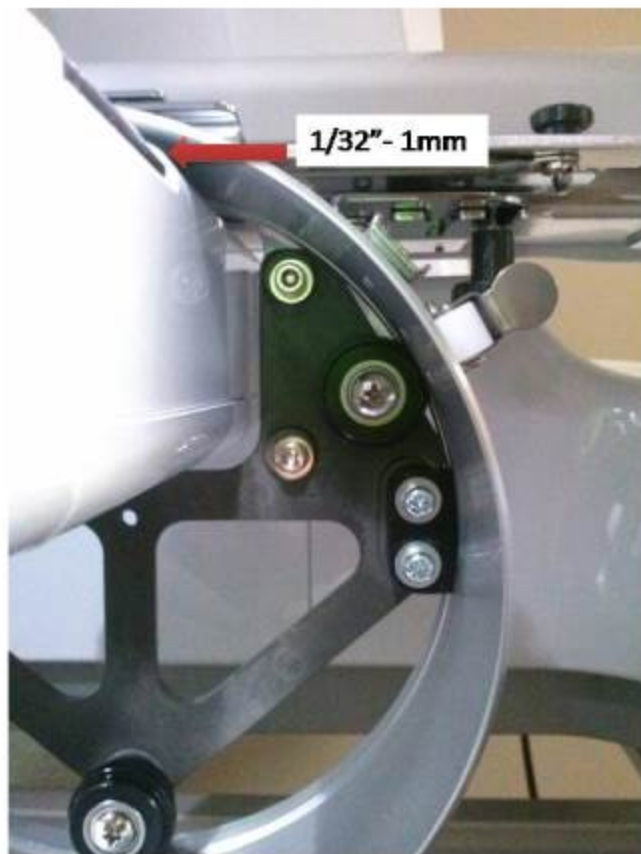

Move/position the black driver ring support down so that the gap between the inside of the aluminum ring is close to but not rubbing on top of the sewing arm. The gap at the corners should be no more than $1/32''$ or about 1mm. ←

Snug the screws down and check the gap again. Adjust if necessary to maintain the gap, then tighten the screws. With the machine controls, move the driver left and right, front and back to check the alignment. Re adjust if necessary.