



# **Assembly Instructions**



# **READ THIS PAGE FIRST**

## ARROW WARRANTY

Thank you for your purchase of an Arrow Sewing Cabinet!

Thank you for your purchase! Our products have a **three-year warranty from the date of shipment from our facility that covers manufacturer defects** plus a 15 day warranty for any shipping damages.

Register online at www.arrowcabinets.com/warranty --get a bonus 1 year of warranty!

The warranty covers parts and freight for the first year and parts only for any claims after the first year. Freight after the first year of ownership will be the responsibility of the customer.

The warranty covers all manufacturer defects but does not cover damage caused by abuse, mis-use, alteration, poor assembly, accident or neglect of the product. The warranty does not cover damage as a result of moving the cabinet fully loaded or damage caused by moving the cabinet with locked casters.

Under the terms of this warranty the repair and replacement of any parts shall be at the discretion of the company or their designated representatives.

## Replacement Part Shipping Policy:

All replacement parts shipping prepaid freight must **ship out at the same time**. Please help us in this endeavor by reviewing ALL parts in ALL boxes for damage before calling or e-mailing us to report damage. Warranty covers shipping cost of replacement parts 1 time only within the first year of ownership. Additional warranty parts requests will be shipped at the customer's expense.

Register online at www.arrowcabinets.com/warranty

VISIT WWW.ARROWCABINETS.COM FOR ASSEMBLY VIDEOS, PICTURES AND FREQUENTLY ASKED QUESTIONS. FOLLOW US ON FACEBOOK AND CHECK OUT OUR COOL CONTESTS!

If you have any questions, please call or email us at:

## 1-800-533-7347

## cs@arrowcabinets.com

Check out our website for pictures and frequently asked questions at: www.arrowcabinets.com

#### Notice to Customer:

Before beginning assembly, remove all parts from the carton. Please review the illustrations below to determine that all parts are included.

For assembly or operating assistance, or to report any missing or damaged parts, you may call or write to:

cs@arrowcabinets.com 1-800-533-7347 Arrow Cabinets


P.O. Box 307, Delavan, WI 53115

TO ORDER REPLACEMENT PARTS CALL 1-800-533-7347 **NOTE:** To assure proper handling of replacement parts please include the following information:

- Model Number of Unit 1001 (Crisp White) 1004 (Pistachio) 1009 (Blue)
- Production ID Number
- Number of Part Required
- Your Name, Address, and Phone Number

# Wooden Materials

Parts are labeled with capital letters. To reference letters, turn to the Wood Parts List in the back of your manual.

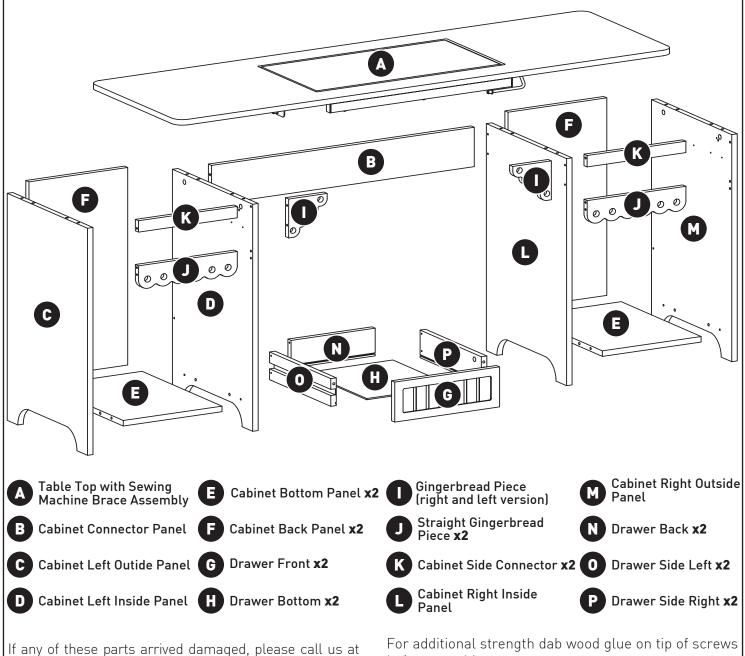


OLIVIA Sewing Cabinet

1-800-533-7347 and we will send a replacement part out.

before attaching.

# Hardware Included

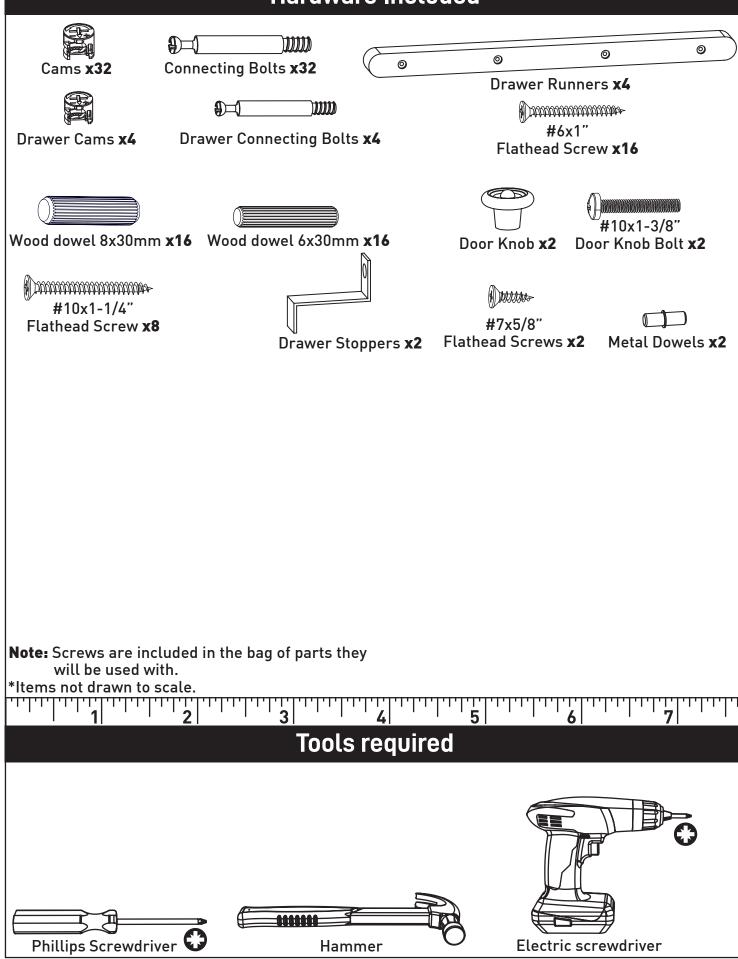


OLIVIA Sewing Cabinet

Page 2


Assembly Instructions

# **Understanding How the "ARROW-LOC" Cam Fastener Works**

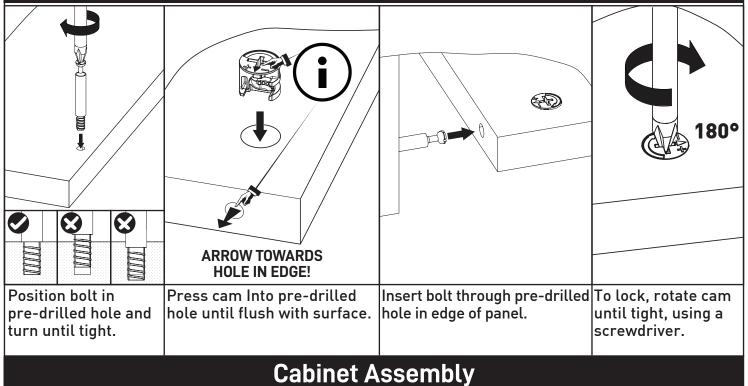


# **Step 1.** Place all wood panels and pieces on a flat working area. Insert Cams (x32) and Connecting Bolts (x32) into the wood panels\* (As shown in FIG. 1). Insert 8x30mm Wood Dowels (x16) into Dowel holes on Panel (A) and on side edges of panels (E).

\*4 Connecting bolts on back of Left Inside Panel (D) and Right Inside Panel (L) (As shown in FIG. 1A). **Note:** For added support, drop 2 to 3 drop of wood glue in each dowel hole before inserting wood dowels. Allow several minutes to dry.

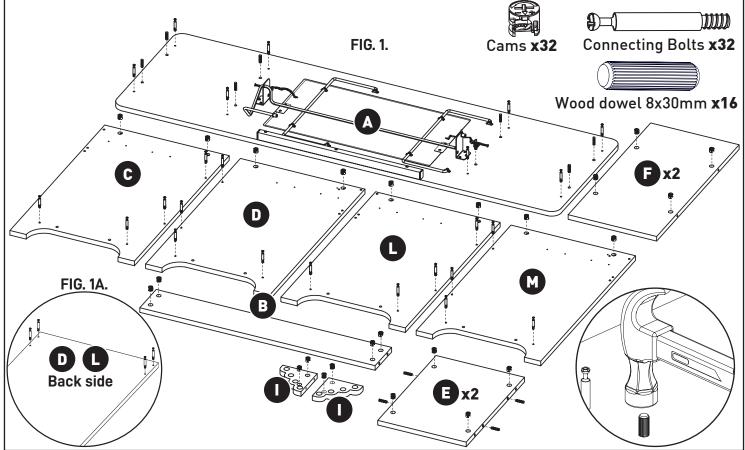


**OLIVIA Sewing Cabinet** 

**Step 2.** Attach drawer runner (x1) each to Cabinet Side Panels (C), (D), (L) and (M) using #6x1" Flathead Screws\* (x16) (See FIG 2). Screw Drawer Stops (x2) into Right Side Panels (D) and (M) above drawer runner using #7x5/8" Flathead screws (x2). DO NOT tighten the screws completely, leave 1/4" for up and down swivel of the drawer runner (See FIG. 2B). Insert Metal Dowels (x2) into predrilled hole next to drawer stop.

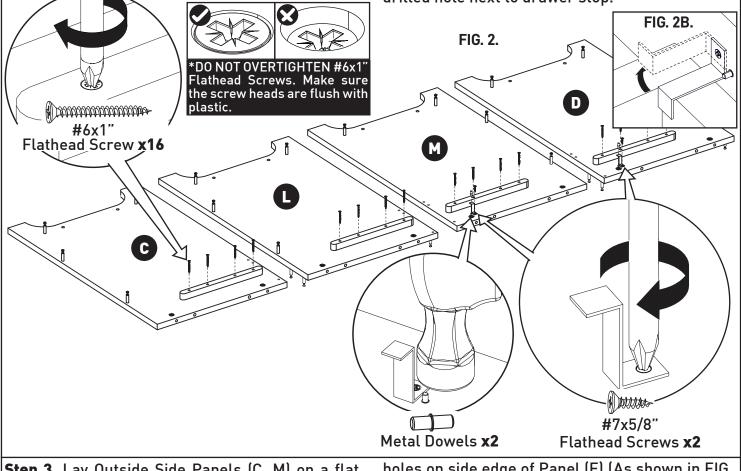


**Step 3.** Lay Outside Side Panels (C, M) on a flat surface with Cams facing up. Attach Back Panel (F) to Panels (C, M) with Cams facing toward the edge of (C, M), guide the Connecting Bolts into holes on side edge of Panel (F) (As shown in FIG. 3). Tighten Cams (x4).

**Note:** Panels (C, M) has no Connecting Bolts on the reverse side.

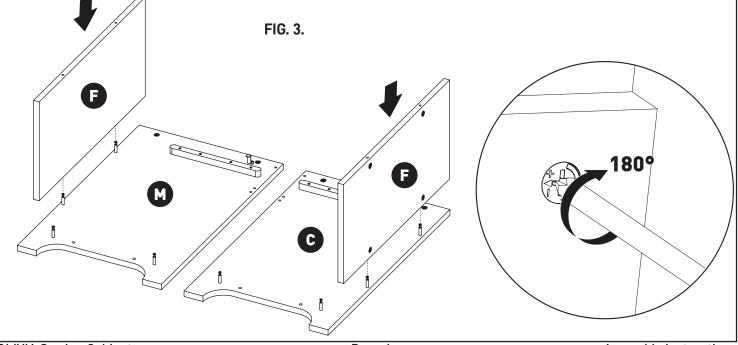


**Step 4.** Insert 6x30mm Wood Dowels (x8) into each Straight Gingerbread Piece (J) and 6x30mm Wood Dowels (x4) into each Cabinet Side Connector (K) (See FIG 4A). With the smooth edge facing the legs on Panels (C, M), guide Connector Piece (K) into Panels (C, M). With the curved edge facing the legs on Panels (C, M), guide Straight Gingerbread Piece (J) into Panels (C, M) (As shown in FIG. 4).

**Note:** For added support, drop 2 to 3 drop of wood glue in each dowel hole before inserting wood dowels. Allow several minutes to dry.

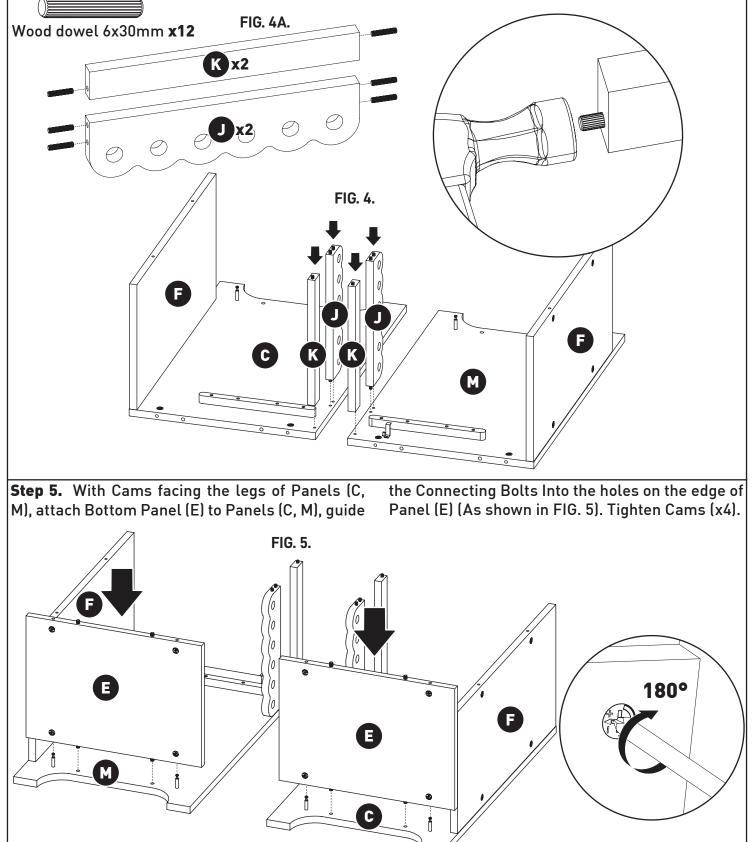


**Step 6.** Using two people attach Inside Side Panels (D, L), with Cams facing down, guiding the connecting bolts into the holes on the edges of


Panel (E) and (F). Also guide the dowels of (K) and (J) into the dowel holes on Panels (D, L) (As shown in FIG. 6). Tighten the Cams (x8).

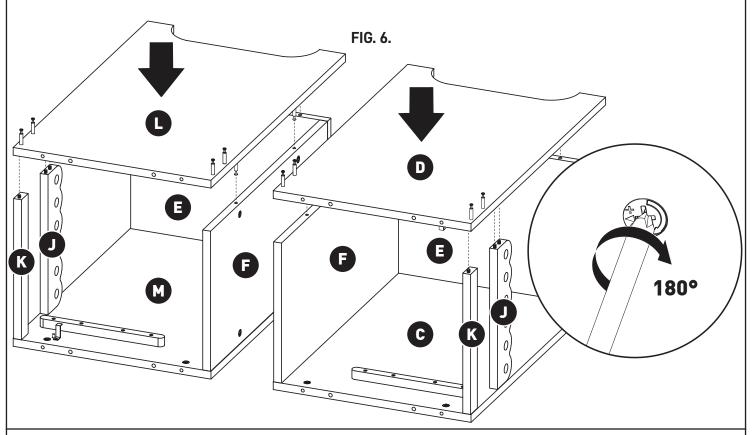


**Step 7.** Attach Gingerbread piece (right and left version) (I) to Left and Right Inside Panels (D, L) with


Cams facing backward and rounded edges facing down (As shown in FIG. 7). Tighten the Cams (x4).

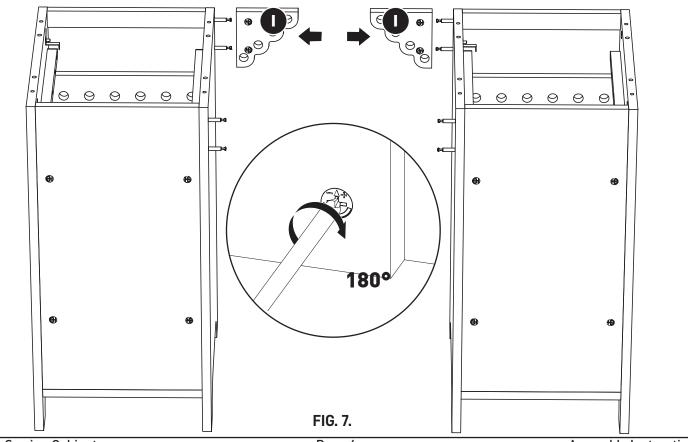

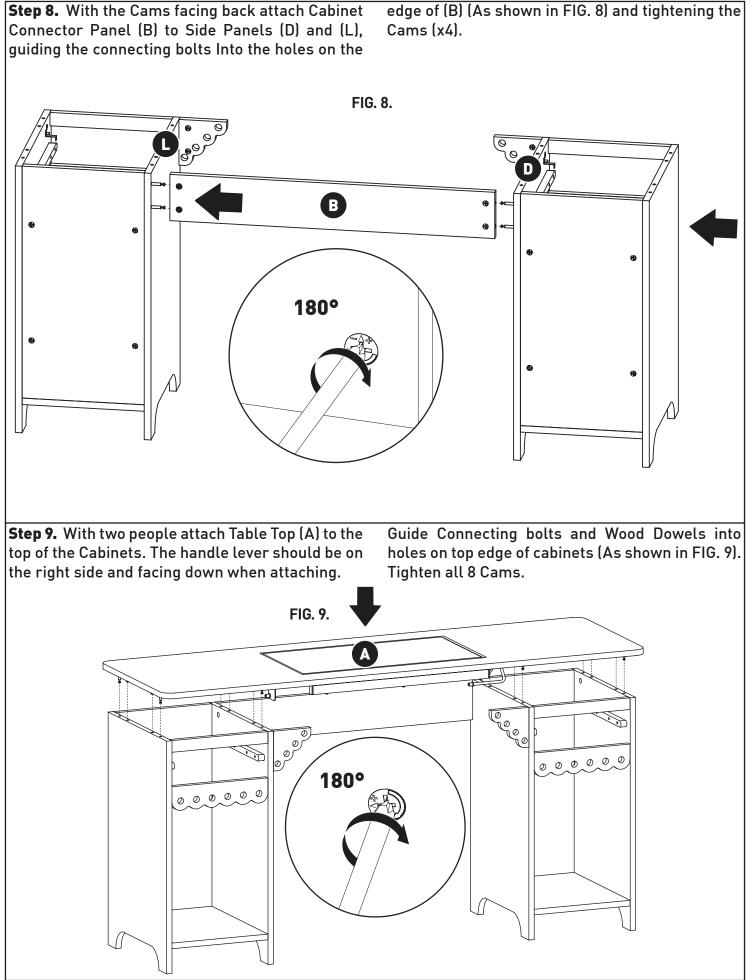

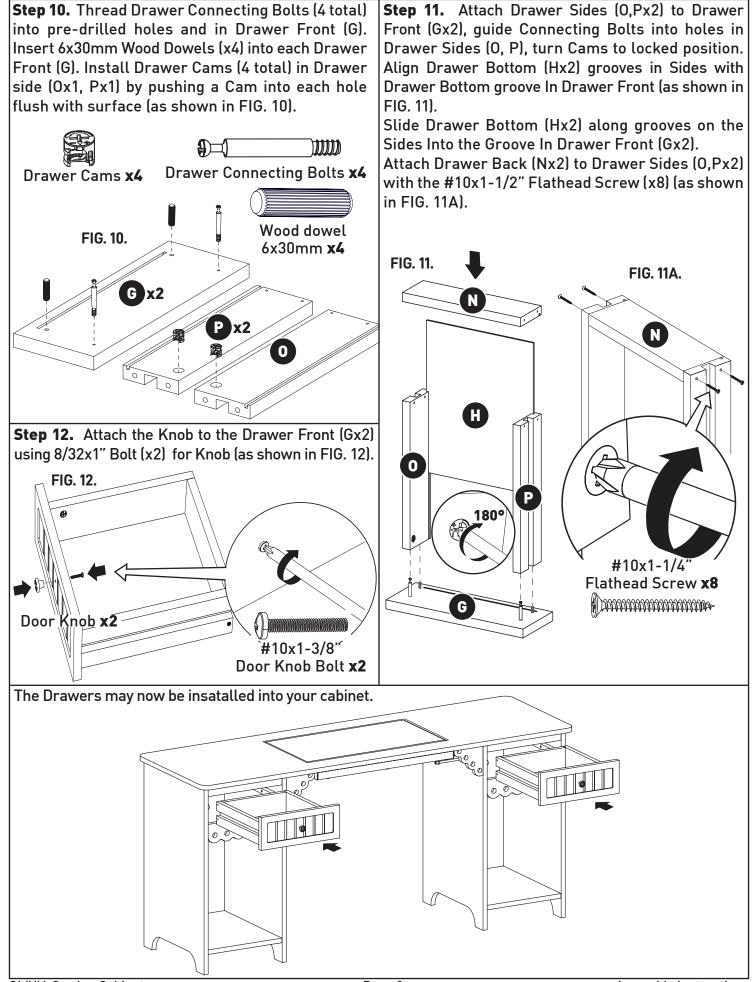


# **Wood Parts and Part Numbers**

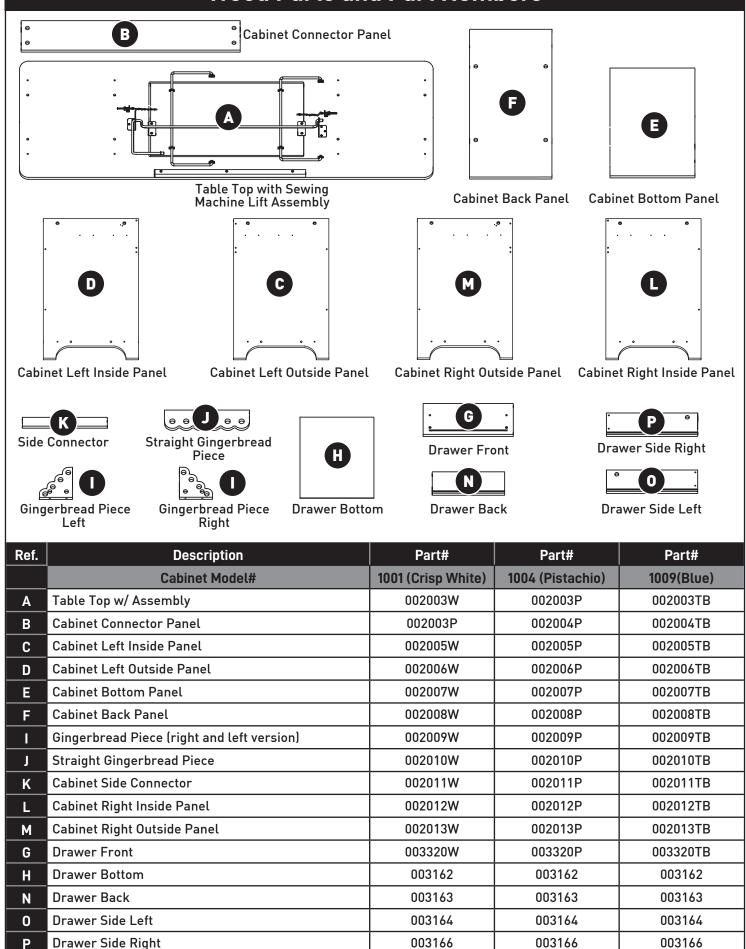

**OLIVIA Sewing Cabinet** 

Ρ


# Hardware Included with Part Numbers

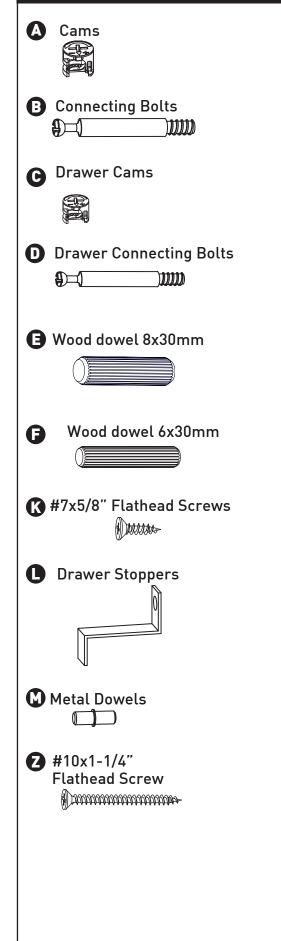


0		0	0	0	
10x1-	3/8" D	oor Knob Bolt			
		)			
or Ki	nob				
$\Box$					
x1" F	lathe	ad Screw			
•					
-					
1					
	Item	Description			Part No.
	Item A	Cams			000709
			lts		
	Α	Cams Connecting Bol Drawer Cams			000709 000709 000709
	A B	Cams Connecting Bol			000709 000709
	A B C	Cams Connecting Bol Drawer Cams	cting Bolts		000709 000709 000709
	A B C D	Cams Connecting Bol Drawer Cams Drawer Connec	cting Bolts Dowels		000709 000709 000709 000709
	A B C D E	Cams Connecting Bol Drawer Cams Drawer Connec 8x30mm Wood	cting Bolts Dowels I Dowels		000709 000709 000709 000709
	A B C D E F	Cams Connecting Bol Drawer Cams Drawer Connec 8x30mm Wood 6x30 mm Wood	cting Bolts Dowels I Dowels r		000709 000709 000709 002649 002012
	A B C D E F G	Cams Connecting Bol Drawer Cams Drawer Connec 8x30mm Wood 6x30 mm Wood Drawer Runner	cting Bolts Dowels I Dowels r or Knob Bolt		000709 000709 000709 002649 002012 002397 003192
	A B C D E F G H	Cams Connecting Bol Drawer Cams Drawer Connec 8x30mm Wood 6x30 mm Wood Drawer Runner #10x1 3/8" Doc	cting Bolts Dowels I Dowels r or Knob Bolt		000709 000709 000709 002649 002012 002397 003192
	A B C D E F G H I	Cams Connecting Bol Drawer Cams Drawer Connec 8x30mm Wood 6x30 mm Wood Drawer Runner #10x1 3/8" Doc Wood Door Kno	cting Bolts Dowels I Dowels r or Knob Bolt ob		000709 000709 000709 002649 002012 002397 003192
	A B C D E F G H I J	Cams Connecting Bol Drawer Cams Drawer Connect 8x30mm Wood 6x30 mm Wood Drawer Runner #10x1 3/8" Doc Wood Door Kno #6x1" Flathead	cting Bolts Dowels I Dowels r or Knob Bolt ob		000709 000709 000709 002649 002012 002397 003192 003180W 001325
	A B C D E F G H I J K	Cams Connecting Bol Drawer Cams Drawer Connect 8x30mm Wood 6x30 mm Wood Drawer Runner #10x1 3/8" Doc Wood Door Kno #6x1" Flathead #7x5/8" Flathe	cting Bolts Dowels I Dowels r or Knob Bolt ob		000709 000709 000709 002649 002012 002397 003192 003180W 001325 002000

# How to Use the Mechanism in your new Olivia Sewing Cabinet


Olivia offers two positions on her sewing surface, the freearm or up position and the flatbed or down position.

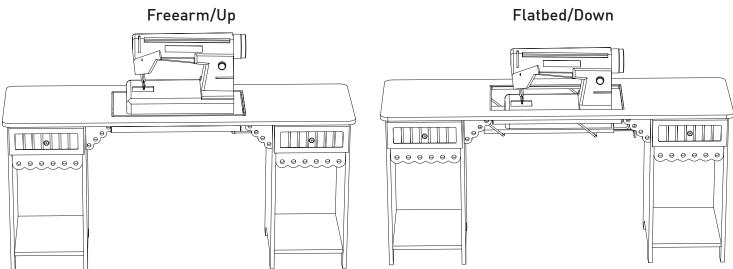


1. To lower the platform down into the sewing well, press firmly down on the handle release and all the way back. Press gently down on the wood platform as it sinks into place.

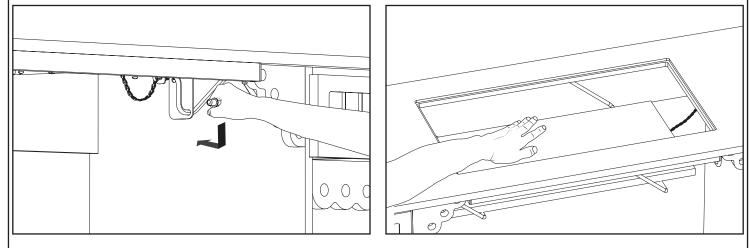


2. To raise the platform up to the freearm position pull the handle all the way forward then up, listening for the handle to hit the wood top surface.

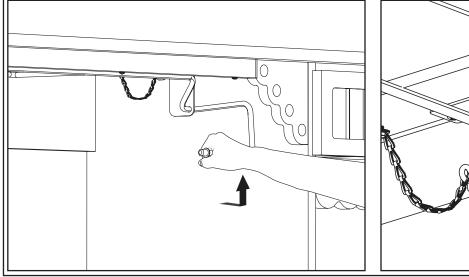

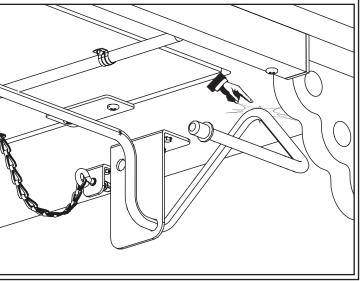


3. Never move the platform with your sewing machine on the platform. Always remove the machine as you move the platform up or down.

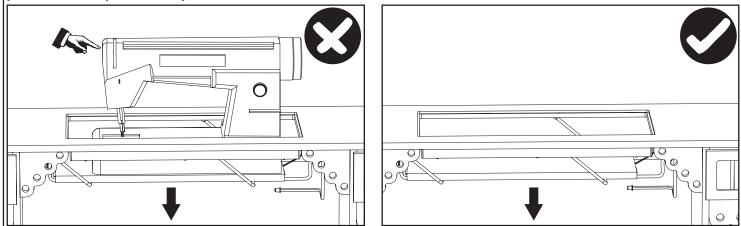


## To adjust the height of the platform in the second position creating a flush surface:

1. Move the platform down into the sewing well as demonstrated in step 1 above.

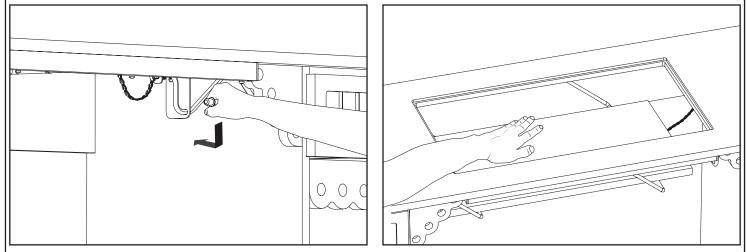


2. Place your machine in the well. If your machine's sewing surface (the area on your machine where your machine's footrests) is sitting below the edge of the table you will need to raise the platform. If your sewing surface is sitting above the edge of the table you will need to lower the platform.

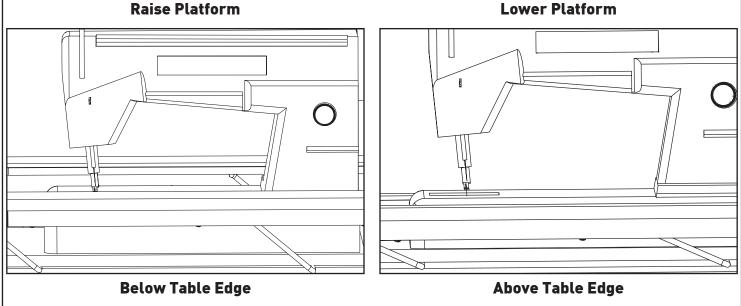



**OLIVIA** Sewing Cabinet

**A. TO LOWER PLATFORM:** Remove your machine from the platform and pull the handle forward to lock the platform in the up position.

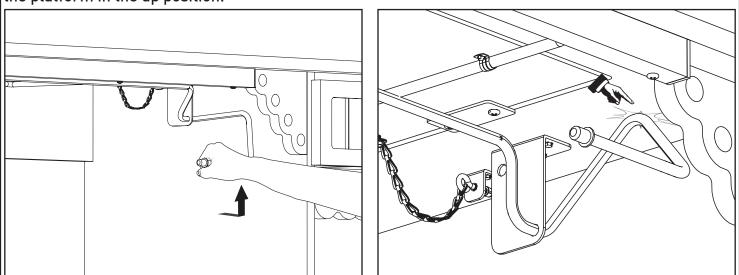


**B.** Begin to loosen the bolt on the Eye-Hook located at the end of the chain under the top surface, until you achieve the proper height for your sewing machine. You may need to adjust this position several times before finding the correct position for your bolt.

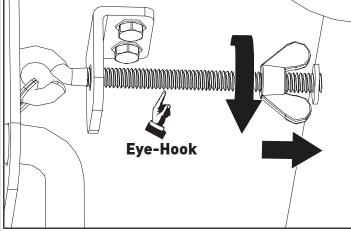

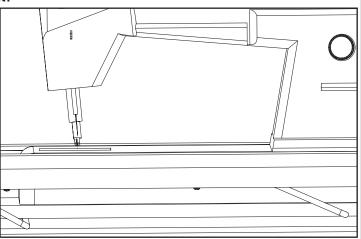

**C. TO RAISE PLATFORM:** Perform the same steps as above in A and B, but instead of loosening the bolt tighten the bolt.


If after completing the above steps your sewing machine's sewing surface is still not flush you may need to shorten the chain by moving the screw or call us for additional length of chain for taller machines.

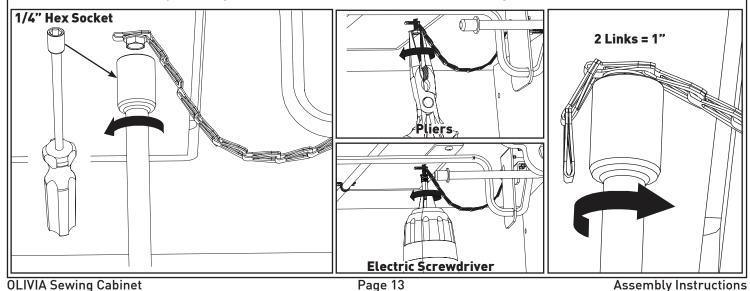

# TROUBLESHOOTING


## 1. What should I do if my handle release falls off?

If your handle release comes loose, reattach it by clipping it back into place.

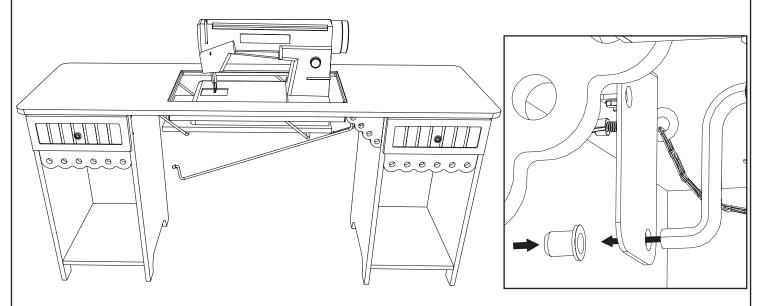

## 2. Why does my sewing machine slam into the down position whenever I place it on the wood platform?

The handle release was not locked into position when it was moved from the down to up position. The handle must hit the wood when adjusting.

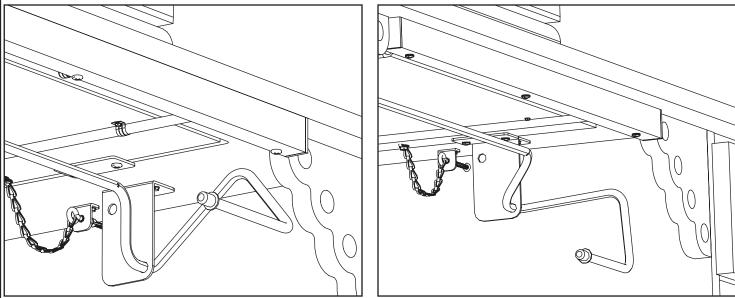

Locked in Place

Not Locked in Place

## 3. How come my drawers are so hard to slide open and shut?

The screws holding the drawer runners in place are screwed in too tight. Loosen the screws so the heads of the screws are flush with the runners.

## 4. My release handle is on the left side and hard to reach, why?

The table top section was assembled the wrong direction. Loosen the (8) Cams and remove the top and adjust it to the right side.



## Accessories to Complete Your Sewing Experience


## **Custom Insert**

Enhance your sewing experience with a custom-made insert for your Arrow or Kangaroo cabinet. Inserts are designed to reduce the gap between the machine and cabinet opening. This provides an ergonomic work surface for the free arm of the sewing machine, allowing for straighter stitches, less fatigue and an overall better experience using your machine and cabinet.

#### **Arrow Sewing Chairs**

Our sewing chairs are designed to provide comfort, support, and the fashionable look you want for your space. Our chairs are the perfect accessory for any craft and sewing room and are offered in several fabric and color options. "They provide necessary lumbar support and comfort for long term sewing. Arrow chairs also have a hidden storage compartment under the seat, perfect or hiding small notions, patterns, and anything else you need.


Visit your local Arrow dealer or arrowcabinets.com for ordering information.

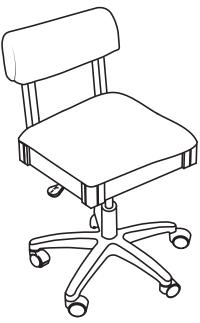

Hydraulic Sewing Chair

05-18

P.O. Box 307 Delavan, WI 53115 1-800-533-7347 cs@arrowcabinets.com www.arrowcabinets.com

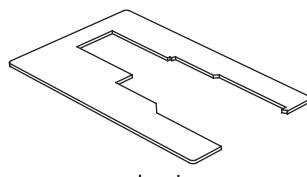

Insert