Attaching the encoders to the Pinnacle Deck





Upper Deck Lower Deck





Bolt, encoder, 2 spacers, and nut.



Nut, 2 spacers, encoder, and bolt.



2spacers go here

Now attach your cable to each encoder there is no left or right, or right or wrong. *Note: However the pin locations are offset be careful when attaching to encoder.* Next attach cable to control box on the sewing machine.