



*Accessories not included

Dingo Cutting Table

Congratulations on the purchase of your new Dingo Cutting Table. Every effort has been taken to ensure your complete satisfaction with this custom designed product. For your convienience the Dingo Cutting Table is supplied in four ready to assemble packs

Helpful Assembly Hints

Read the instructions carefully before starting. Check to see that all the parts are included. Work in a spacious area preferably on a carpet or soft surface. You will need a phillips head and flat head screw driver for the assembly. A cordless drill is preferable. Ensure the phillips head screwdriver fits neatly and fully engages the screw head. Failure to do this may result in screw damage. Make sure you tighten all the screws securely and tap dowels all the way in.

Warranty Information

G-day mate! We warranty our product for 1 year from date of shipment for manufacturer's defects or shipping damage within the first 15 days. The warranty does not cover damage caused by abuse, mis-use, alteration, accident, or neglect of the product. The warranty does not cover damage caused by moving the cabinet fully loaded. Under the terms of this warranty the repair and replacement of any parts shall be at the discretion of the company or their designated representative.

Replacement Part Shipping Policy

To help protect our valuable resources, we ship all replacement parts out at the same time. This procedure lessens the use of packaging materials and fossil fuels used in transportation keeping our world for all kangaroos and the people like you a cleaner place. Please help us in this endeavor by reviewing all parts in all boxes for damage before calling or e-mailing us to report damage. We adhere to our environmental philosophy by only shipping replacement parts out 1 time for free. Future parts requests will be billed at the customer's expense.

Cabinet Care

Your Dingo Cutting Table normally requires a minimum amount of maintenance, however the following points are worth noting:

CLEANING - To remove marks and enhance the surface, wipe over with a general purpose cleaner.


CAUTION - Do not use ammonia based cleaning agents. Do not use harsh chemicals or abrasive cleaners. The surface can be wiped with a damp cloth but should be dried quickly.


If you have missing or damaged parts please call Kangaroo Kabinets at 1-800-533-7347 or email us a: cs@kangarookabinets.com

Also visit our website: www.kangarookabinets.com

Components		Description	Qty
		Cam Bolt 24mm Threaded	12
©		Cam 15 x 12mm	12
		Dowel 8 x 30mm	44
Α		Screw 3.4 x 15mm C/S	56
D	(1)	Screw 3.5 x 18mm C/S	4
Е		Screw 3 x 25mm C/S	6
F	@	Screw 6 x 10mm C/S	36
Н		Hinge Screw 6 x 15mm	12
		Hinge Mounting Plate	6
		Hinge Note: Hinge & Mounting Plate may be supplied together. Please separate before assembly.	6
		Bow Handle & Screws	2
O		Caster Washer	6
®		Cam Bolt 24mm	20
		Cam 15x10mm	20
(x)		Screw 4 x 32mm	38
203		Caster Wrench	1
		Caster 50mm	6
		Caster 50mm Locking	2
		Caster Bracket	2
		Butt Hinge 50mm	4
		Drawer Runner 400mm*	9 Sets
		Glue Bottle	- 3


	oningo Assembly mandendria		
Components	Description	Qty	
a	Button (Gate Leg)	2	
	Ramp	2	
	Lock Striker	2	
	Equalizer	2	
	Lock & Key	2	
	Key Hole	2	

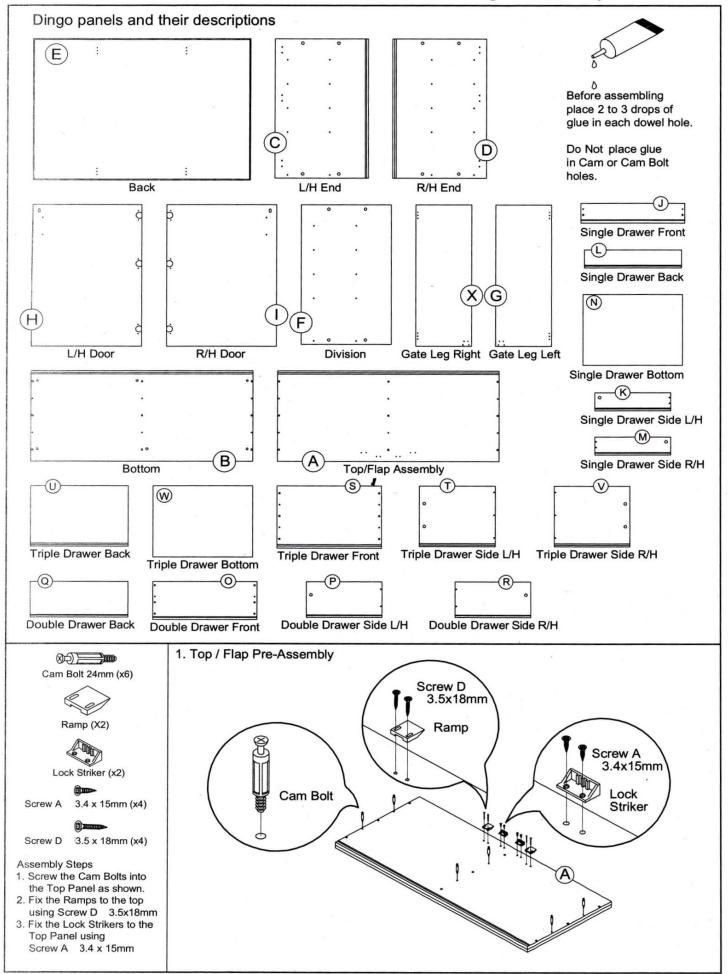


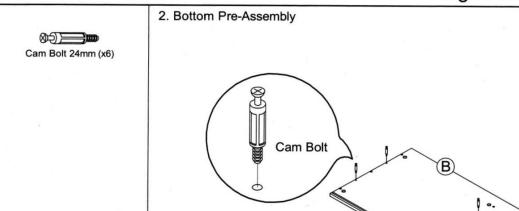

Assembly Steps

1. Screw the Cam Bolts into the Bottom Panel as shown.



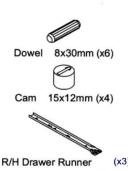










Assembly Steps


- 1. Place 2 to 3 drops of Glue into the Dowel holes in the Right Hand End & insert Dowels.
- 2. Fix the Hinges using Screw H 6 x 15mm
- 3. Press fit Cams into the Ends. Ensure the arrow on the Cam points to the closest edge.
- 4. Position and secure Runners using Screw F 6x10mm

Note: Do not put glue in Cam Bolt holes.

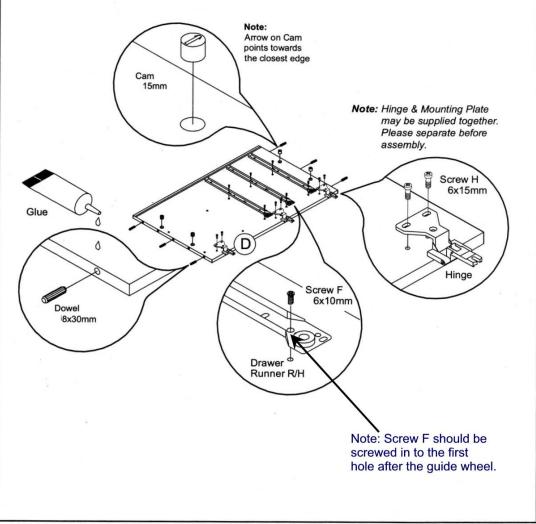

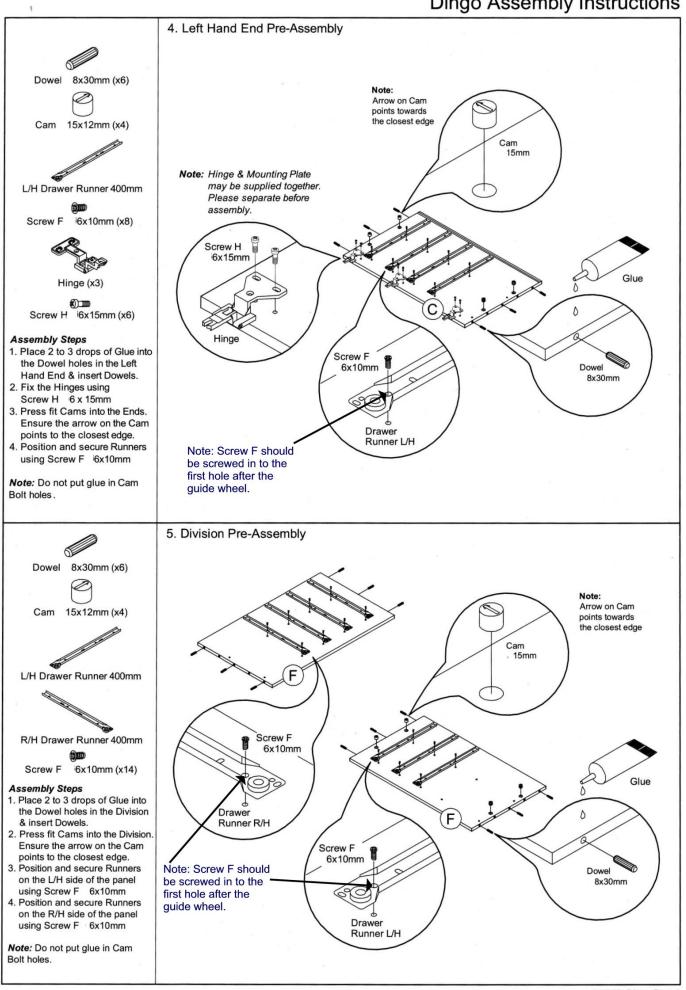

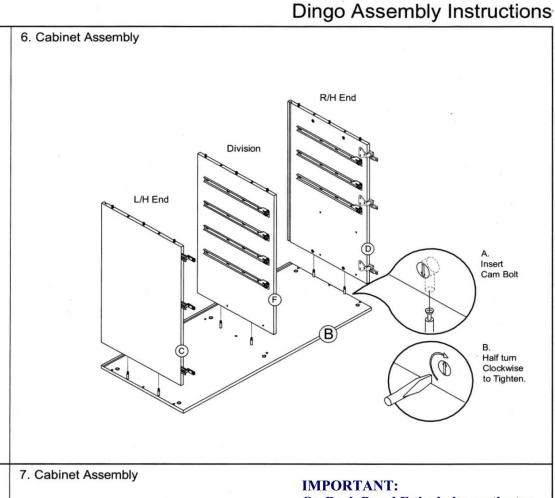

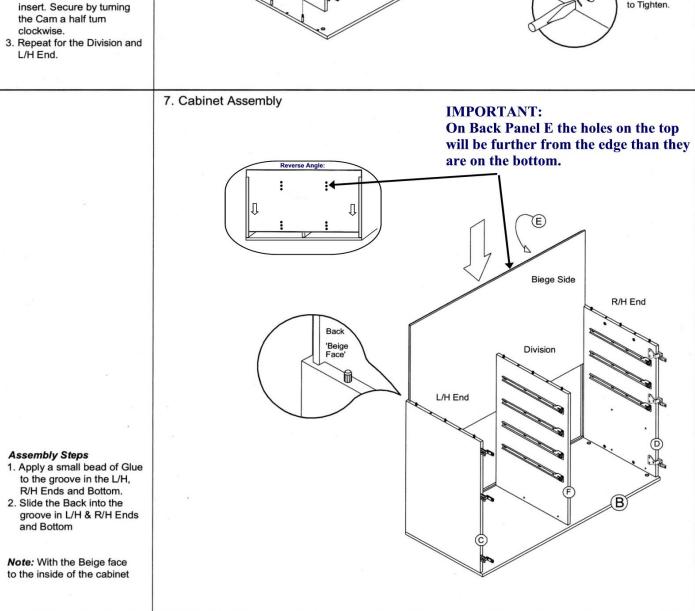


Assembly Steps

Bottom.

1. Place 2 to 3 drops of Glue into the dowel holes in the

2. Position the Cam holes in the R/H End over the Cam

Bolts in the Bottom and

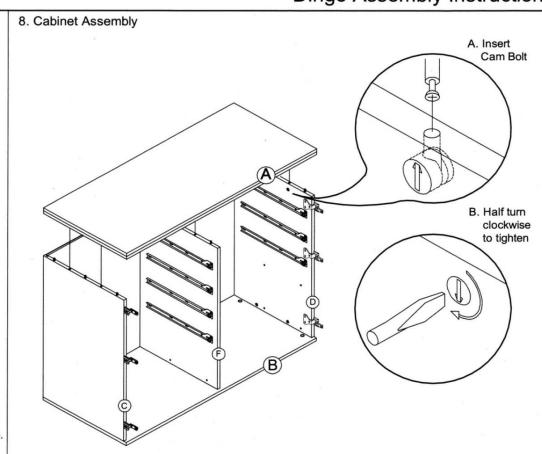


Assembly Steps

- Place 2 to 3 drops of Glue in the Dowel holes in the Top Panel assembly.
- Position the Cam Bolts in the Top Panel over the Cam holes in the Ends and Division and insert.
 Secure by turning the Cams a half turn clockwise.

9. Cabinet Assembly



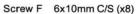



Assembly Steps

- Fix R/H Drawer Runner to R/H End and L/H side of the Division & secure using Screw F 6x10mm
- Fix L/H Drawer Runner to
 L/H End and R/H side of the
 Division and secure
 using Screw F 6x10mm
- Rotate Cabinet onto its back and then top carefully.

Note:

It will require 2 people to lift and rotate cabinet over onto its back and top.

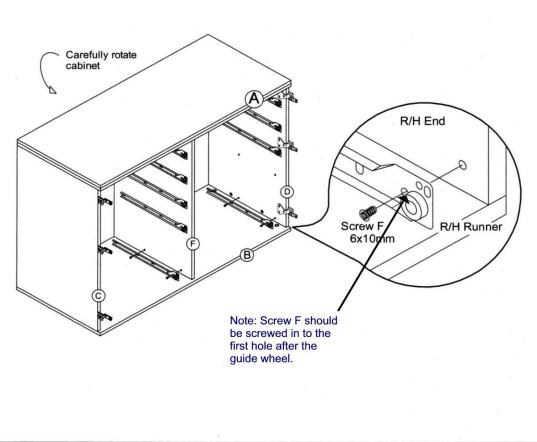

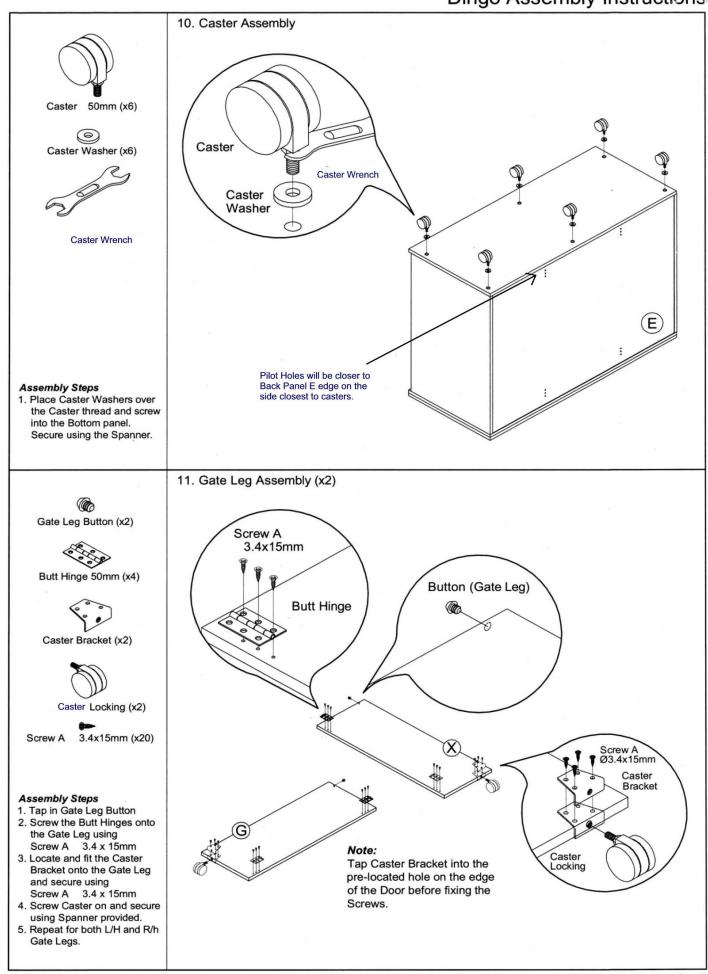




Screw A 3.4x15mm (x12)

Assembly Steps

- 1. Locate and fix the Gate Legs to the back of the Cabinet using Screw A 3.4x15mm
- 2. Swing the Gate Legs up against the back.
- 3. Roll Cabinet back over onto Castors Carefully

Note: It will require 2 people to lift and rotate Cabinet safely.

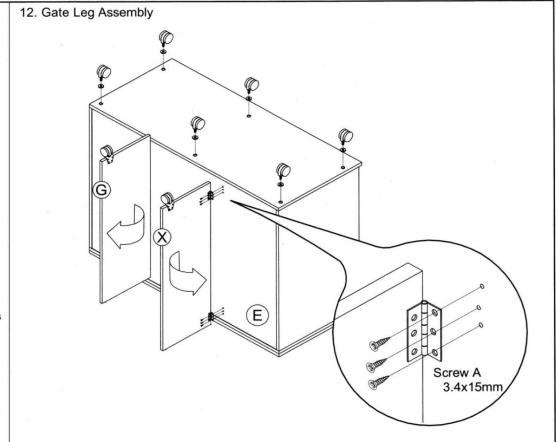



Hinge Mounting Plate (x6)



Escutcheon (x2)







Screw E 3 x 25mm (x6)




Screw A 3.4x15mm (x14)


- 1. Screw on Hinge Mounting Plate using Screw A 3.4x15mm C/S
- 2. Screw on Equalizer using Screw A 3.4x15mm C/S
- 3. Screw on Lock using Screw E 3x25mm C/S
- 4. Add a couple of drops of glue to the edge of the Escutcheon and press fit into the door.
- 5. Repeat for L/H Door

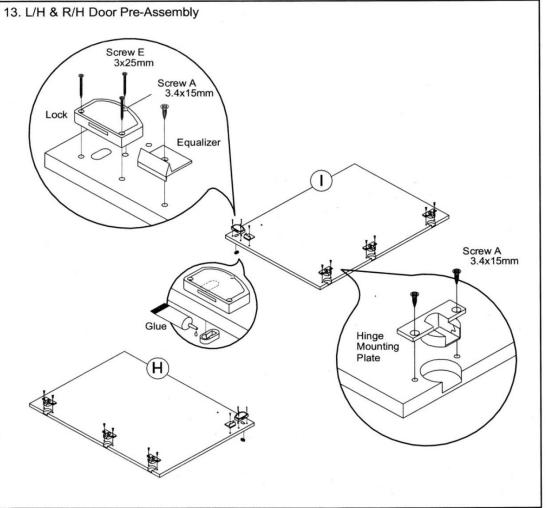

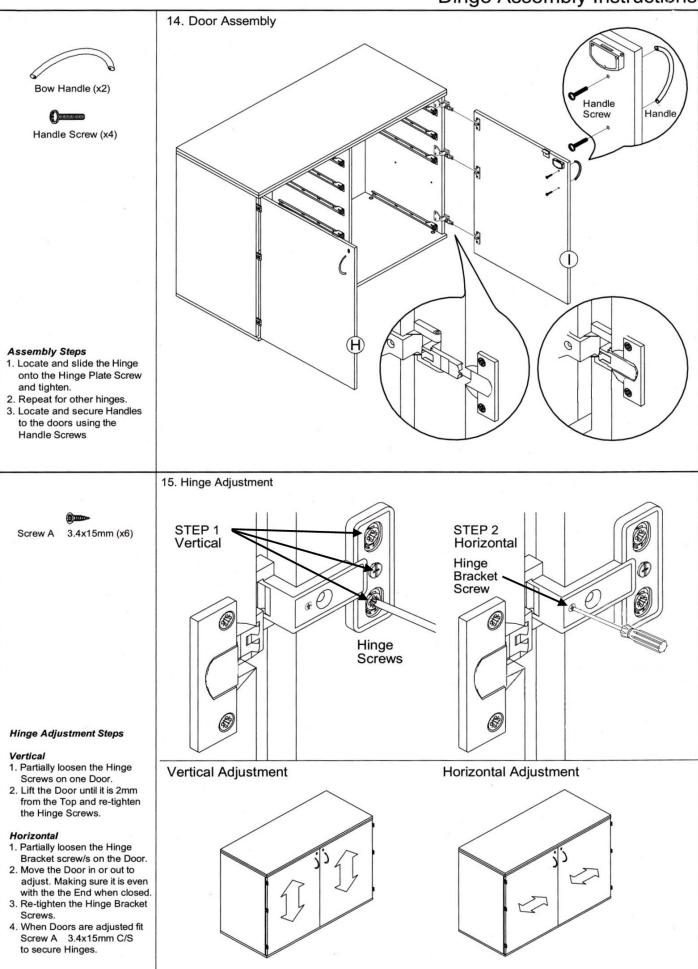

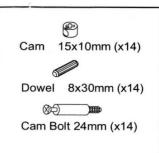

- Assembly Steps
 1. Place 2 to 3 drops of glue
 in each dowel hole in Drawer
 Sides and insert Dowels.
- Insert Cams into the Drawer Sides ensuring the arrow points to the front edge.
- Screw the Cam Bolts into the Drawer Front as shown.

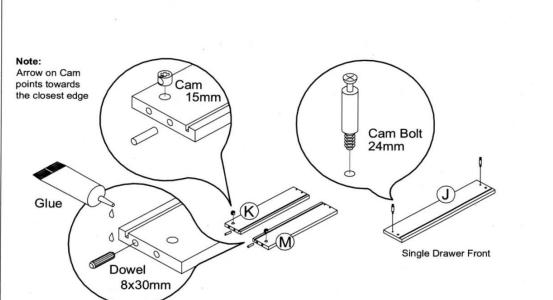


16. Single Drawer Assembly (x7)

17. Single Drawer Assembly (x7)



Screw 4x32mm (x28)

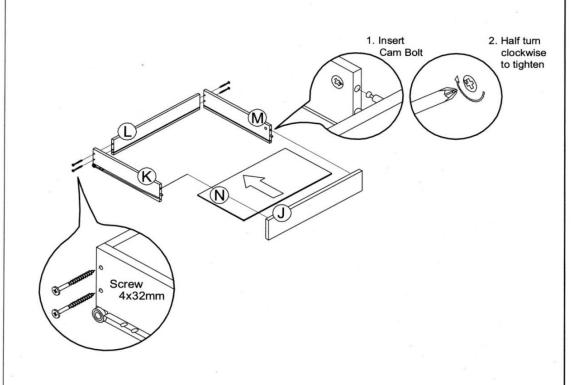

- Secure the L/H & R/H
 Drawer Sides to the Drawer
 Back using
 Screw 4x32mm
- Slide the Drawer Bottom into the Drawer Side groove.
- Place 2 to 3 drops of glue into the dowel holes in Drawer Front. Then locate the Drawer Front on the Drawer Sides and secure by turning the Cams a half turn clockwise.



Cam 15x10mm (x2)



Dowel 8x30mm (x6)




Cam Bolt 24mm (x2)

Assembly Steps

- Place 2 to 3 drops of glue in each dowel hole in Drawer Sides and insert Dowels.
- Insert Cams into the Drawer Sides ensuring the arrow points to the front edge.
- Screw the Cam Bolts into the Drawer Front as shown.


18. Double Drawer Assembly

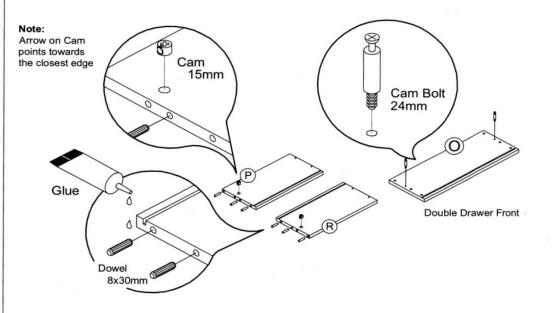



Screw 4x32mm (x4)

19. Double Drawer Assembly

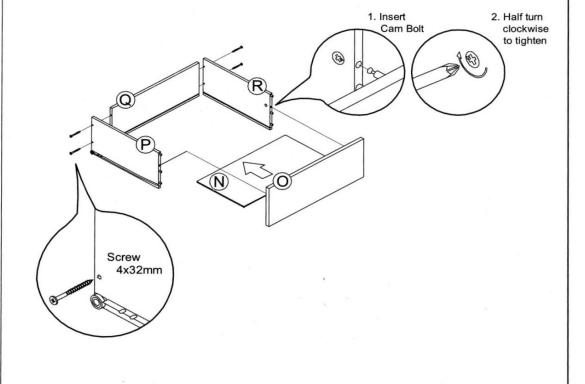

- Secure the L/H & R/H
 Drawer Sides to the Drawer
 Back using
 Screw 4x32mm
- 2. Slide the Drawer Bottom into the Drawer Side groove.
- Place 2 to3 drops of glue into the dowel holes in Drawer Front. Then locate the Drawer Front on the Drawer Sides and secure by turning the Cams a half turn clockwise.



Cam 15x10mm (x4)



Dowel 8x30mm (x6)




Cam Bolt 24mm (x4)

Assembly Steps

- 1. Place 2 to 3 drops of glue Sides and insert Dowels.
- 2. Insert Cams into the Drawer Sides ensuring the arrow
- 3. Screw the Cam Bolts into the

20. Triple Drawer Assembly

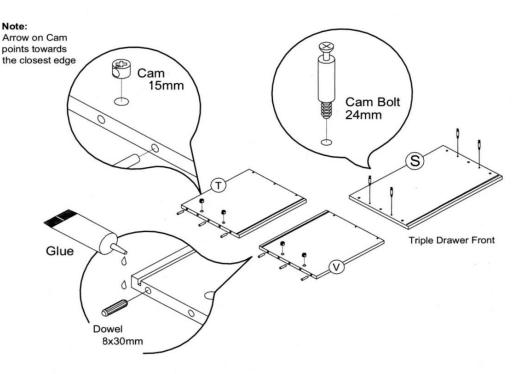


- in each dowel hole in Drawer
- points to the front edge.
- Drawer Front as shown.

21. Triple Drawer Assembly



Screw 4x32mm (x6)

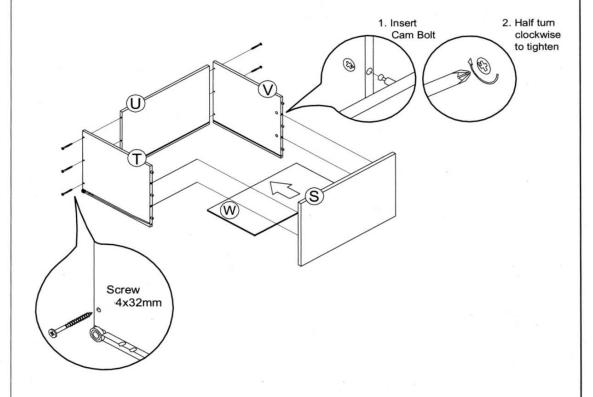


- 1. Secure the L/H & R/H Drawer Sides to the Drawer Back using Screw 4x32mm
- 2. Slide the Drawer Bottom into the Drawer Side groove.
- 3. Place 2 to 3 drops of glue into the dowel holes in Drawer Front. Then locate the Drawer Front on the Drawer Sides and secure by turning the Cams a half turn clockwise.

22. Drawer Fitting

Assembly Steps
1. Insert Drawers onto the runners in the cabinet.

Note:

Triple Drawer on the bottom righ hand side and Double on the bottom left hand side.

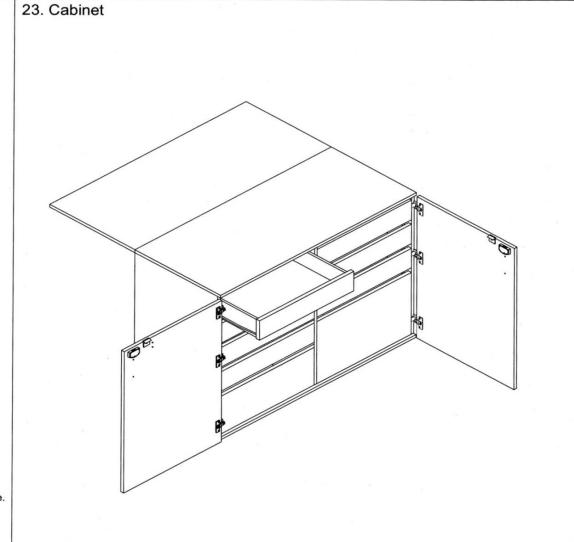

Note:

Doors fold back to give un-obstructed access to drawers and cutting surface. They conveniently close and lock when finished.